



2375

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		38160A 4	GIMBAL HOUSING ASSEMBLY	1		
2	22	31345	GREASE FITTING	1		
3		29359	LUBRICAP	1		
4	19	38860	WELCH PLUG-Top	1		
5	23	38634	BUSHING-Upper	1		
6	26	32540	OIL SEAL-Upper Gimbal Housing	1		
7	23	38196	BUSHING-Lower	1		
8	26	32911	OIL SEAL-Lower Gimbal Housing	2		
9	30	31561	BALL BEARING	1		
10		38188	MOUNUT-Rubber-Gimbal Housin	1		
11	10	35046	DRIVE SCREW-Exhaust Flange	8		
12	27	38168	GASKET-Gimbal Housing to Tran	1		
13		38413	PILOT RING	1		
14	26	38294	SEAL-Water	1		
15		34762A 1	PLATE ASSEMBLY-Inhibitor	1		
16	10	34763	SCREW-Inhibitor Plate to Gimbal	2		
17	10	34290	SCREW-Water Tube Cover to Gi	2		
18	23	38265	BUSHING-Seal-Water Tube	1		
19	54	38840	CLAMP-Water Tube to Gimbal Ho	1	(S/N-1830978 & Up)	
20	10	38862	SCREW-Water Tube Clamp to Gi	1	(S/N-1830978 & Up)	
21	13	26392	LOCKWASHER-Water Tube Clar	1	(S/N-1830978 & Up)	
22	32	38841	WATER TUBE	1	(S/N-1830978 & Up)	
22	32	38264	WATER TUBE	1	(S/N-1830977 & Below)	
23		38209	COVER-Water Tube	1	(S/N-1830978 & Up)	
23		38904	COVER-Water Tube	1	(S/N-1830977 & Below)	
24	32	38303	WATER HOSE-Gimbal Housing to I	1	(S/N-1830978 & Up)	
24	32	38905	WATER HOSE-Gimbal Housing to I	1	(S/N-1830977 & Below)	
25	23	34103	BUSHING-Nylon-Water Tube Seal	1	(S/N-1830977 & Below)	
26	54	35830	CLAMP-Water Tube to Gimbal Hou	2		
27		38584	PLATE-Supporting-Transom Plate	1		
28	12	38585	WASHER-Square-Transom Screw	2		
29	10	38197	SCREW-Transom to Gimbal Housin	4		
30	13	30381	LOCKWASHER-Transom Screw	4		
31	10	38233	BOLT-Gimbal Housing to transom P	4		
32	12	38403	WASHER-Rubber-Gimbal Housing	4		
33	12	21900	WASHER-Gimbal Housing Bolt	4		
34	11	34087	NUT-Gimbal Housing Bolt	4		
35		38176A 1	BELLOWS ASSEMBLY-Universal J	1		
36	54	32739	CLAMP-Universal Joint Bellows to C	1		
37	54	38889	CLAMP-Universal Joint to Bell Hous	1		
38		38177	EXHAUST BELLOWS	1		