



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	50	37151	STARTER MOTOR ASSEMBLY, C	1		
1		37163	HOUSING, STARTER	1		
2	23	37162	BUSHING, STARTER HOUSING	1		
3	11	37172	NUT, DRIVE ASSEMBLY TO AR	1		
4	17	37173	PIN, ARMATURE NUT	1		
5		37160	DRIVE ASSEMBLY	1		
6	10	37159	BOLT SET, THRU-STARTER HC	1		
7		37174	FIELD COIL ASSEMBLY	1		
8		37152	BRUSH HOLDER PACKAGE (PC	1		
9		37156	ARMATURE	1		
10		37157	BRUSH HOLDER PACKAGE (NE	1		
11	23	37154	BUSHING, END PLATE	1		
12	12	37155	WASHER SET, ARMATURE	1		
13		37158	BRUSH SET, NEGATIVE AND P	1		
14	12	37161	WASHER, RETAINING-ARMATL	1		
15	25	37167	GROMMET, STARTER MOTOR	1		
16	10	37166	BOLT, STARTER FIELD COIL	4		
17	17	37171	PIN ASSEMBLY, ARM TO STAR	1		
18		37170	ARM ASSEMBLY, SOLENOID	1		
19	10	37169	SCREW KIT, SOLENOID ARM T	1		
20	10	37165	BOLT, THRU-STARTER SOLE	1		
21		37168	PLATE (PAIR), STARTER SOLE	1		
22		37164	SOLENOID ASSEMBLY, START	1		
23		37153	WASHER AND NUT REPLACEM	1		