



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		32785	WIRING HARNESS, EXTERNAL	1	SERIAL 00000000-01565943	
2		32702	VOLTAGE REGULATOR	1	SERIAL 00000000-01565943	
1		34453	WIRING HARNESS EXTERNAL	1	SERIAL 01565944-01566081	
2		34141	VOLTAGE REGULATOR	1	SERIAL 01565944-01566081	
3		33614A 1	MOUNT ASSEMBLY, VOLTAGE R	1	SERIAL 00000000-01729800	
4	10	29238	SCREW, VOLTAGE REGULATO	3	SERIAL 00000000-01729800	
5	10	33615	SCREW VOLTAGE REGULATO	2	SERIAL 00000000-01729800	
6	12	22887	WASHER, VOLTAGE REGULAT	2	SERIAL 00000000-01729800	
7	23	28626	SPACER, VOLTAGE REGULATC	2	SERIAL 00000000-01729800	
8	25	28627	GROMMET, VOLTAGE REGULA	2	SERIAL 00000000-01729800	
1		37708	WIRING HARNESS, EXTERNAL (I	1	SERIAL 01729800-01949901	
2A		37707	VOLTAGE REGULATOR, TRANSI	1	SERIAL 01729801-09999999	
9	10	37908	SCREW, VOLTAGE REGULATOR	3	SERIAL 01729801-09999999	
10	21	20028	WASHER, VOLTAGE REGULATO	3	SERIAL 01729801-09999999	
1		39543	WIRING HARNESS, EXTERNAL (I	1	SERIAL 01949902-09999999	
11		39593	BATTERY CABLE, POSITIVE	1	SERIAL 01949902-09999999	
11		39594	BATTERY CABLE, NEGATIVE	1	SERIAL 01949902-09999999	
12		39589	BRACKET, MOUNTING - BALLAS	1	SERIAL 01949902-09999999	
13	10	28464	SCREW, BRACKET AND FLYWHE	1	SERIAL 01949902-09999999	
13	10	45754	SCREW, BRACKET AND FLYWHE	1	SERIAL 01949902-09999999	
14		26079	PLATE, WIRING HARNESS TO M	1	SERIAL 01949902-09999999	
15	10	46718	SCREW, WIRING HARNESS PLA	4	SERIAL 01949902-09999999	
16	54	22875	CLIP, WIRING HARNESS TO BOA	2		
17	10	22793	SCREW, WOOD - WIRING HARNI	2		
18		22789	"D" WASHER, WIRING HARNES	2		
19		25661	STARTER SOLENOID (SEE NOT I	1		
20	13	26993	LOCKWASHER, STARTER SOLE	2		
21	11	20083	NUT, STARRTER SOLENOID TEF	2		
22	13	26996	LOCKWASHER, STARTER SOLE	2		
23	11	20645	NUT, STARTER SOLENOID TERM	2		
--		8464	SCREW, SOLENOID TO ALTERN	2	SERIAL 00000000-01564340	
--	10	20031	SCREW, SOLENOID TO EXHAUS	2	SERIAL 01564341-01668464	
24		36177	INSULATOR, STARTER SOLEND	1	SERIAL 01668465-09999999	
25		36176	BRACKET, STARTER SOLENOID	1	SERIAL 01668465-09999999	
26	10	29197	SCREW, BRACKET TO MANIFOLI	2	SERIAL 01668465-09999999	
26	10	33231	SCREW, BRACKET TO MANIFOLI	2	SERIAL 01668465-09999999	
27	13	26993	LOCKWASHER, BRACKET SCREW	2	SERIAL 01668465-09999999	
28	10	21625	SCREW, STARTER SOLENOIOD	2	SERIAL 01668465-09999999	
29	13	26992	LOCKWASHER, STARTER SOLE	2	SERIAL 01668465-09999999	
30	11	20088	NUT, STARTER SOLENOID SCRE	2	SERIAL 01668465-09999999	
31		22829	OIL PRESSURE SENDER ASSEM	1	SERIAL 00000000-01665942	