



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		35865A	2 FLYWHEEL HOUSING ASSEMBLY	1	SERIAL 00000000-02046624	
1		45892A	2 FLYWHEEL HOUSING ASSEMBLY	1	SERIAL 02046625-02726998	
1		55898A	3 FLYWHEEL HOUSING ASSEMBLY	1	SERIAL 02786857-09999999	
2	23	46742	SPACER,FLYWHEEL HOUSING	2		
3		35864	COVER PLATE,FLYWHEEL HOUSING	1		
4	10	47277	SCREW,COVER PLATE TO FLYWHEEL	6		
5	11	46793	NUT,COVER PLATE SCREW	6		
6	54	34764	EYE,LIFTING-FLYWHEEL HOUSING	1		
7	10	26632	SCREW,FLYWHEEL HOUSING TO BRACKET	5	SERIAL 00000000-01951139	
8	10	34613	SCREW,FLYWHEEL HOUSING TO BRACKET	1	SERIAL 00000000-01951139	
9	13	37459	LOCKWASHER,FLYWHEEL HOUSING TO BRACKET	6	SERIAL 00000000-01951139	
10	11	32219	NUT,FLYWHEEL HOUSING TO BRACKET	1	SERIAL 00000000-01951139	
7	10	26632	SCREW,FLYWHEEL HOUSING TO BRACKET	1	SERIAL 01951140-02726998	
8	10	28464	SCREW,BRACKET AND FLYWHEEL HOUSING	1	SERIAL 01951140-02726998	
8	10	45754	SCREW,BRACKET AND FLYWHEEL HOUSING	1	SERIAL 01951140-02726998	
9	13	37459	LOCKWASHER,BRACKET AND FLYWHEEL HOUSING	6	SERIAL 01951140-02726998	
10	11	28517	NUT,BRACKET AND FLYWHEEL HOUSING	1	SERIAL 01951140-02726998	
7	10	26632	SCREW,FLYWHEEL HOUSING TO BRACKET	5	SERIAL 02786857-09999999	
8	10	34613	SCREW,FLYWHEEL HOUSING TO BRACKET	6	SERIAL 02786857-09999999	
9	13	37459	LOCKWASHER,FLYWHEEL HOUSING TO BRACKET	1	SERIAL 02786857-09999999	
10	11	28517	NUT,FLYWHEEL HOUSING TO BRACKET	1	SERIAL 02786857-09999999	
11		32786	TAB,WIRING HARNESS TO FLYWHEEL HOUSING	2	SERIAL 00000000-02046624	
12	54	22690	CLAMP,WIRING HARNESS TO FLYWHEEL HOUSING	1	SERIAL 00000000-02046624	
12	54	22627	CLAMP,WIRING HARNESS TO FLYWHEEL HOUSING	1	SERIAL 00000000-02046624	
13	10	20191	SCREW,WIRING HARNESS CLAMP	2	SERIAL 00000000-02046624	
14	13	26995	LOCKWASHER,WIRING HARNESS CLAMP	2	SERIAL 00000000-02046624	
15		22789	"D" WASHER,WIRING HARNESS CLAMP	2	SERIAL 00000000-02046624	
16	11	26419	NUT,WIRING HARNESS CLAMP	2	SERIAL 00000000-02046624	
12	54	24871	CLAMP,WIRING HARNESS TO FLYWHEEL HOUSING	1	SERIAL 02046625-02726998	
13	10	22028	SCREW,WIRING HARNESS CLAMP	1	SERIAL 02046625-02726998	
14	13	26996	LOCKWASHER,WIRING HARNESS CLAMP	1	SERIAL 02046625-02726998	
17		39974	CONNECTOR,HARNESS LEADS	2	SERIAL 02046625-02726998	
18	10	37892	SCREW,CONNECTOR TO FLYWHEEL HOUSING	2	SERIAL 02046625-02726998	
12	54	24871	CLAMP,WIRING HARNESS TO FLYWHEEL HOUSING	1	SERIAL 02786857-09999999	
13	10	22028	SCREW,WIRING HARNESS CLAMP	1	SERIAL 02786857-09999999	
14	13	26996	LOCKWASHER,WIRING HARNESS CLAMP	1	SERIAL 02786857-09999999	
17		39974	CONNECTOR,HARNESS LEADS	4	SERIAL 02786857-09999999	
18	10	47618	SCREW,CONNECTOR TO FLYWHEEL HOUSING	4	SERIAL 02786857-09999999	
19		32832	MOUNT,FLYWHEEL HOUSING (L)	1		
19		33149	MOUNT,FLYWHEEL HOUSING (R)	1		
20	54	24764	EYE,LIFTING CYLINDER BLOCK	1		