



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	66962A	1 WIRING HARNESS, ET	1		
1	84	86673A	2 WIRING HARNESS, EX	1	SERIAL 00000000-05811268	
1	84	93179A	1 WIRING HARNESS, EX	1	SERIAL 05811269-09999999	
2	10	29240	SCREW, WIRING HARNESS ATT.	2	USED WITH B-84-66962A1	
3	12	24676	WASHER, WIRING HARNESS AT	2	USED WITH B-84-66962A1	
4		26079	PLATE, WIRING HARNESS TO FL	1		
5	10	46718	SCREW, WIRING HARNESS PLA	4		
6		63770	TAB, HARNESS ATTACHING (US)	2		
7	88	78813	CIRCUIT BREAKER	1		
8	11	68219	NUT, HARNESS TO CIRCUIT BRE	2		
9		86924	BRACKET, CIRCUIT BREAKER	1	SERIAL 00000000-05514733	
9		90923	BRACKET, CIRCUIT BREAKER	1	SERIAL 05514734-09999999	
10	10	24637	SCREW, CIRCUIT BREAKER TO F	2		
11	11	46438	NUT, CIRCUIT BREAKER SCREW	2		
12	10	21077	SCREW, CIRCUIT BREAKER BRA	2		
13	13	37459	LOCKWASHER, CIRCUIT BREAK	2		
14		34623	OIL PRESSURE SENDER ASSEM	1		
15	13	26996	WASHER, SENDER TERMINALS	2		
16	11	68219	NUT, SENDER TERMINALS (10-3	2		
17	22	32974	ADAPTOR, OIL PRESSURE SENC	1		
18		36525	WATER TEMPERATURE SENDEL	1		
19	89	68258	STARTER SOLENOID	1		
20	13	26993	LOCKWASHER, STARTER SOLEI	2		
21	11	68292	NUT, STARTER SOLENOID TERN	2		
22	13	26996	LOCKWASHER, STARTER SOLEI	2		
23	11	68219	NUT, STARTER SOLENOID TERN	2		
24	10	69028	SCREW, STARTER SOLENOID M	2		
26	11	20664	NUT, STARTER SOLENOID SCRE	2		
27	84	94227A	2 RESISTANCE WIRE KIT	1		