

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		45060A 7	HYDRAULIC PUMP ASSEMBLY	1,1,1,1	SEE B4 FOR PARTS BREAKDOV	
2	25	26834	"O" RING, HYDRAULIC PUMP T	4,4,4,4		
3	10	46318	SCREW, VENT - HYDRAULIC PI	1,1,1,1		
4	13	46317	LOCKWASHER, SEALING - VEN	1,1,1,1		
5	10	28634	SCREW, FILLER - HYDRAULIC I	1,1,1,1		
6	12	20260	WASHER, SEALING - HYDRAULI	1,1,1,1		
7	10	29877	SCREW, HYDRAULIC PUMP TO	1,1,1,1		
7	10	45765	SCREW, HYDRAULIC PUMP TO	2,2,2,2		
8	11	35814	NUT, HYDRAULIC PUMP SCREW	3,3,3,3		
9	54	37282	CLAMP, HYDRAULIC PUMP HARI	1,1,1,1		
10		37281	"D" WASHER, HYDRAULIC PUMF	1,1,1,1		
11	38	45372	DECAL, INSTRUCTIONS - HYDRA	1,1,1,1		
12		45382A 1	CONTROL VALVE ASSEMBLY	1,...		
12		45764A 2	CONTROL VALVE ASSEMBLY	,1,...		
12		48077A 3	CONTROL VALVE ASSEMBLY	,,1,1		
--	25	26834	"O" RING, HYDRAULIC PUMP T	4,4,4,4	SEE REFERENCE #2	
13	22	38609	PLUG, CONTROL VALVE (3/8-24"	1,1,1		
13	22	38609	PLUG, CONTROL VALVE (3/8-24"	,2,...		
14	10	21091	SCREW, CONTROL VALVE TO H	4,4,4,4		
15	13	26392	LOCKWASHER, CONTROL VALVE	4,4,4,4		
16		45325	CONNECTOR AND HARNESS	1,1,1,1		
17		45559	TERMINAL BLOCK, HYDRAULIC F	1,1,1,1		
18	10	28192	SCREW, TERMINAL BLOCK TO H	2,2,2,2		
19	10	30663	SCREW, HARNESS LEADS TO TI	2,2,2,2		
20		46306A 1	BRACKET ASSEMBLY, PUMP MO	,1,1,1		
21	10	26066	SCREW, PUMP MOUNTING BR	,3,3,3		
22	12	20546	WASHER, PUMP MOUNTING B	,3,3,3		
23	11	35814	NUT, PUMP MOUNTING BRAC	,3,3,3		
24	54	22740	CLAMP, PUMP MOUNTING BRAC	,3,3,3		
25	10	35519	SCREW, CLAMP TO MOUNTING I	,1,1,1		
26		22789	"D" WASHER, CLAMP ATTACHIN	,1,1,1		
27		45552	BATTERY LEAD (POSITIVE)	1,1,1,1		
28		45551	BATTERY LEAD (NEGATIVE)	1,1,1,1		
29		25661	STARTER SOLENOID	1,1,1,1		
30	13	56996	LOCKWASHER, STARTER SOLE	2,2,2,2		
31	11	20645	NUT, STARTER SOLENOID TERM	2,2,2,2		
32	13	26993	LOCKWASHER, STARTER SOLE	2,2,2,2		
33	11	20083	NUT, STARTER SOLENOID TERM	2,2,2,2		
34		46265	BOOT, RUBBER - STARTER SOLI	2,2,2,2		
35	10	34290	SCREW, STARTER SOLENOID TI	2,2,2,2		
36	12	26992	LOCKWASHER, STARTER SOLE	2,2,2,2		

