



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	1547	5523A18	DRIVE SHAFT HOUSING ASSEMBLY	1	
2		54235A 2	COVER ASSEMBLY, WATER POCKET	1	
3	26	36557	SEAL, RUBBER-WATER POCKET	1	17
4	27	55810	GASKET, WATER POCKET COVER	1	17
5	10	28668	SCREW, WATER POCKET COVER	4	
6	32	54236	TUBE, WATER-WATER POCKET	1	
7	37	76731A 1	DECAL SET, DRIVE SHAFT HOUSING	1	
8	37	76749	DECAL, DRIVE SHAFT HOUSING	1	
8	37	76750	DECAL, DRIVE SHAFT HOUSING	1	
8	37	76751	DECAL, DRIVE SHAFT HOUSING	1	
8	37	76730	DECAL, DRIVE SHAFT HOUSING	1	
8	37	91969	DECAL, DRIVE SHAFT HOUSING	1	
8	37	77649	DECAL, DRIVE SHAFT HOUSING	1	
8	37	76998	DECAL, DRIVE SHAFT HOUSING	1	
8	37	79411	DECAL, DRIVE SHAFT HOUSING	1	
9	26	96503	OIL SEAL, DRIVE SHAFT HOUSING	1	17
10	26	32511	OIL SEAL, GEAR CHAMBER-DRIVE	1	17
11	15	36178A 1	SHIM, BEARING CUP TO DRIVE SHAFT	1	
12	45	55796	DRIVE SHAFT, UPPER	1	
13	25	55801	"O" RING, UPPER DRIVE SHAFT	1	17
14		76098A 1	COVER ASSEMBLY, TOP-DRIVE SHAFT	1	
15	31	61100A 1	BEARING ASSEMBLY, DRIVE SHAFT	1	
16	15	45691A 1	SHIM, BEARING CUP TO TOP COVER	1	
17	25	32546	"O" RING, TOP COVER SEALING	1	17
18	10	58640	SCREW, TOP COVER TO DRIVE SHAFT	4	