



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		45892A	2 FLYWHEEL HOUSING ASSEMBLY	1	SERIAL 00000000-02816416	
1		55898A	3 FLYWHEEL HOUSING ASSEMBLY	1	SERIAL 02816417-09999999	
1		46742	SPACER, FLYWHEEL HOUSING	2		
3		35864	COVER PLATE, FLYWHEEL HO	1		
4	10	47277	SCREW, COVER PLATE TO FLY	6		
5	11	46793	NUT, COVER PLATE SCREW	6		
6	54	34764	EYE, LIFTING - FLYWHEEL HOUS	1		
7	10	26632	SCREW, FLYWHEEL HOUSING T	4	SERIAL 00000000-02816416	
8	10	28464	SCREW, BRACKET/FLYWHEEL F	1	SERIAL 00000000-02816416	
8	10	45754	SCREW, BRACKET/FLYWHEEL F	1	SERIAL 00000000-02816416	
7	10	26632	SCREW, FLYWHEEL HOUSING T	4	SERIAL 02816417-09999999	
8	10	34613	SCREW, FLYWHEEL HOUSING T	1	SERIAL 02816417-09999999	
9	13	37459	LOCKWASHER, BRACKET AND F	6		
10	11	28517	NUT, BRACKET AND FLYWHEEL	1		
11	54	24871	CLAMP, WIRING HARNESS TO FI	1		
12	10	22028	SCREW, WIRING HARNESS CLAI	1		
13	13	26996	LOCKWASHER, WIRING HARNE	1		
14		39974	CONNECTOR, HARNESS LEADS	2	SERIAL 00000000-02816416	
15	10	37892	SCREW, CONNECTO TO FLYWHI	2	SERIAL 00000000-02816416	
14		39974	CONNECTOR, HARNESS LEADS	4	SERIAL 02816417-09999999	
15	10	47618	SCREW, CONNECTOR TO FLYWI	4	SERIAL 02816417-09999999	
16		32832	MOUNT, FLYWHEEL HOUSING (L	1		
16		33149	MOUNT, FLYWHEEL HOUSING (F	1		
17	54	34764	EYE, LIFTING - CYLINDER BLOC	1		
18	10	27165	SCREW, LIFTING EYE TO CYLIN	1		
19	13	37459	LOCKWASHER, LIFTING EYE SC	1		
20	38	31042	SERIAL PLATE	1		
21	10	28642	SCREW, DRIVE - SERIAL PLATE	2		
22		36099A	2 BRACKET ASSEMBLY, FRONT MI	1		
23	23	46742	SPACER, FRONT MOUNTING B	1		
24		32833	MOUNT, FRONT MOUNTING BF	1		
25		35862	BLOCK, SPACER - FRONT MOUN	1		
26	10	32557	SCREW, BRACKET AND SPACER	2		
27	13	32993	LOCKWASHER, BRACKET AND S	2		
28	12	22248	WASHER, BRACKET AND SPACE	2		
29	10	26486	SCREW, FRONT MOUNTING BR/	2		
30	13	37459	LOCKWASHR, FRONT MOUNTIN	2		
31	12	37828	WASHER, FRONT MOUNTING BF	2		
32	16	36100	STUD, ADJUSTING - FRONT MOL	1		
33	12	36103	WASHER, FRONT MOUNTING BF	2		
34	12	22628	WASHER, FRONT MOUNTING BR	1		