



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	61975	WIRING HARNESS, EXTERNAL	1	SERIAL 03332138-03462607	
1	84	63715	WIRING HARNESS, EXTERNAL	1	SERIAL 03462608-03771644	
1	84	66962A	WIRING HARNESS, EXTERNAL	1	SERIAL 03771645-09999999	
2	10	20055	SCREW, WIRING HARNESS LEA	1		
3	13	26996	LOCKWASHER, WIRING HARNE	1		
4	12	30164	WASHER, WIRING HARNESS LE	1		
5		26079	PLATE, WIRING HARNESS TO M	1		
6	10	46718	SCREW, WIRING HARNESS PLA	4		
7		61990	STA-STRAP, STARTER SOLENOI	1	SERIAL 03332138-00346260	
8		39593	BATTERY CABLE POSITIVE	1	SERIAL 03332138-00346260	
8		39594	BATTERY CABLE NEGATIVE	1	SERIAL 03332138-00346260	
9	54	54178	CLAMP, WIRING HARNESS TO C	1	SERIAL 03332138-00346260	
10	10	25703	SCREW, WIRING HARNESS HAR	1	SERIAL 03332138-00346260	
11	13	37459	LOCKWASHER, WIRING HARNE	1	SERIAL 03332138-00346260	
12		63770	TAB, HARNESS ATTACHING	2	SERIAL 00462608-09999999	
13	10	35585	SCREW, HARNESS TO ROCKER	2	SERIAL 00462608-09999999	
14	12	20583	WASHER, HARNESS TO ROCKE	2	SERIAL 00462608-09999999	
15		59816	CIRCUIT BREAKER	1	SERIAL 03332138-03771544	
16	10	36046	SCREW, WIRING HARNESS LE	2	SERIAL 03332138-03771544	
15	88	65093	CIRCUIT BREAKER	1	SERIAL 03771645-04918569	
--	11	20645	NUT, HARNESS TO CIRCUIT BRE	2	SERIAL 03771645-04918569	
--	13	26996	LOCKWASHER, HARNESS TO CIR	2	SERIAL 03771645-04918569	
15	88	78813	CIRCUIT BREAKER	1	SERIAL 04918570-09999999	
17		61800	BRACKET, CIRCUIT BREAKER	1	SERIAL 03332138-03462607	
17		62566	BRACKET, CIRCUIT BREAKER	1	SERIAL 03462608-09999999	
18	10	47618	SCREW, CIRCUIT BREAKER TO	2		
19	12	47960	WASHER, CIRCUIT BREAKER AT	4		
20	25	61999	GROMMET, CIRCUIT BREAKER	4		
21	23	61998	SPACER, CIRCUIT BREAKER AT	2	SERIAL 03332138-03462607	
21	23	63431	SPACER, CIRCUIT BREAKER AT	2	SERIAL 03462608-09999999	
22	11	46438	NUT, CIRCUIT BREAKER ATTACH	2		
23	10	21077	SCREW, CIRCUIT BREAKER BR	1	SERIAL 03332138-03462607	
23	10	27165	SCREW, CIRCUIT BREAKER BR	1	SERIAL 03332138-03462607	
23	10	21077	SCREW, CIRCUIT BREAKER BR	2	SERIAL 03462608-09999999	
24	13	37459	LOCKWASHER, CIRCUIT BREAK	2		
25	54	60517	CLAMP, WIRING HARNESS TO B	1	SERIAL 03332138-00377164	
26	10	47194	SCREW, CLAMP TO BRACKET (S	1	SERIAL 03332138-00377164	
27	11	46438	NUT, CLAMP ATTACHING SCREW	1	SERIAL 03332138-00377164	
28		34623	OIL PRESSURE SENDER ASSEM	1		
29	13	26996	WASHER, WATER SENDER/OIL	2		
30	11	20645	NUT, WATER SENDER/OIL PRES	2		