



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		52390A	EXHAUST MANIFOLD ASSEMBLY	1		
2	16	46545	STUD, EXHAUST MANIFOLD TO	4		
3	22	32802	PLUG, PIPE - EXHAUST MANIF	1		
4	22	48118	PLUG, EXHAUST MANIFOLD	1		
5	22	32561	PLUG, PIPE - EXHAUST MANIF	1		
6	32	53370	TUBE, HEAD - EXHAUST MANIF	1		
7	10	33231	SCREW, PLUG - EXHAUST MAN	2		
8	10	52143	SCREW, EXHAUST MANIFOLD TI	4		
9	12	20553	WASHER, EXHAUST MANIFOLD	6		
10	16	52093	STUD, EXHAUST MANIFOLD TO	2		
11	11	49838	NUT, EXHAUST MANIFOLD STAU	2		
12		60252	END CAP/CONNECTOR, EXHAU	1		
13	27	48043	GASKET, END CAP/CONNECTOR	1		2
14	10	24234	SCREW, END CAP/CONNECTOR	4		
16	10	29240	SCREW, WIRING HARNESS CLA	2		
17	12	24676	WASHER, WIRING HARNESS CL	3		
18		73813A	END CAP, EXHAUST MANIFOLD	1		
19	27	73814	GASKET, END CAP TO EXHAUST	1		2
20	10	25299	SCREW, END CAP TO EXHAUST	4		
21	27	53354	GASKET, EXHAUST MANIFOLD T	1		8,2
22		76351A	EXHAUST ELBOW ASSEMBLY	1		
24	22	32802	PLUG, PIPE - EXHAUST ELBOW	1		
25	22	33198A	PLUG, EXHAUST ELBOW	4		
26	27	52076	GASKET, EXHAUST ELBOW TO E	1		2
27	13	37459	LOCKWASHER, EXHAUST ELBOW	4		
28	11	49838	NUT, EXHAUST ELBOW TO EXH	4		
29	32	47642	HOSE ASSEMBLY, INLET - DIST.	1		
30	54	32523	CLAMP, INLET HOSE TO WATER	2		
31		47587A	BLOCK ASSEMBLY, WATER DIST	1		
32	22	32803	PLUG, PIPE - WATER DISTRIB	1		
33	22	32802	PLUG, PIPE - WATER DISTRIB	1		
34	27	33680	GASKET, WATER DISTRIBUTION	1		8
35	10	21077	SCREW, WATER DISTRIBUTION	2		
36	22	53509	ELBOW, WATER DISTRIBUTION	1		
37		59078	THERMOSTAT	1		
38	27	47590	GASKET, THERMOSTAT COVER	1		2
39		60372A	COVER ASSEMBLY, THERMOSTA	1		
40	10	60374	SCREW, THERMOSTAT COVER	2		
41	12	36533	WASHER, THERMOSTAT COVER	1		
43	32	52481	HOSE, WATER DIST. BLOCK TO	1		
44	54	22280	CLAMP, HOSE TO WATER DIST	2		