



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		65059A 1	FLYWHEEL HOUSING ASSEMBLY	1		
2	23	46742	SPACER, FLYWHEEL HOUSING	2		
3		35864	COVER PLATE, FLYWHEEL HO	1		
4	10	47277	SCREW, COVER PLATE TO FLY	6		
5	11	46793	NUT, COVER PLATE SCREW	6		
6	54	72531	EYE, LIFTING - FLYWHEEL HOUS	1		
7	10	26632	SCREW, FLYWHEEL HOUSING T	5		
8	10	34613	SCREW, FLYWHEEL HOUSING T	1		
9	13	37459	LOCKWASHER, BRACKET AND F	6		
10	11	32219	NUT, BRACKET AND FLYWHEEL	1		
11	54	61001	CLIP, WIRING HARNNESS TO CL	1		
12	10	26065	SCREW, WIRING HARNNESS CL	1		
13		32832	MOUNT, FLYWHEEL HOUSING (L	1		
13		33149	MOUNT, FLYWHEEL HOUSING (F	1		
14		67850	EYE, LIFTING - CYLINDER BLOCK	1		
15	10	54528	SCREW, LIFTING EYE TO CYLIND	2		
17		73571A 2	BRACKET ASSEMBLY, FRONT M	1		
18	23	35903	SPACER, FRONT MOUNTING B	1		
19		32833	MOUNTING, FRONT MOUNTING	1		
20		35862	BLOCK, SPACER - FRONT MOUN	1		
21	10	32557	SCREW, BRACKET AND SPACE	2		
22	13	32993	LOCKWASHER, BRACKET AND S	2		
23	12	22248	WASHER, BRACKET AND SPACE	2		
24	10	26486	SCREW, FRONT MOUNTING BR	2		
25	13	37459	LOCKWASHER, FRONT MOUNTI	2		
26	12	34931	WASHER, FRONT MOUNTING BF	2		
27	16	36100	STUD, ADJUSTING - FRONT MOL	1		
28	12	36103	WASHER, FRONT MOUNTING BF	2		
29	12	32638	WASHER, FRONT MOUNTING BF	1		
30	12	20959	WASHER, FRONT MOUNTING BF	1		
31	23	36101	SPACER, FRONT MOUNTING BR	1		
32	12	36104	WASHER, RUBBER - FRONT MOI	1		
33	11	20220	NUT, FRONT MOUNTING BRACK	1		
34	11	32882	NUT, FRONT MOUNTING BRACK	2		
35		32778	SUPPORT, FRONT - ENGINE MOI	1		
36		32849	SUPPORT, FRONT - ENGINE MOI	OPT.		
39	11	47525	NUT, FRONT MOUNTING BRACK	1		
40		45915	TERMINAL BLOCK	1		
41	10	20189	SCREW, TERMINAL BLOCK TO F	1		
42	11	27164	NUT, TERMINAL BLOCK SCREW	1		
42	10	62668	SCREW, ROTARY TRIM SENDER	1		