



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-		65897A	POWER STEERING MOUNTING KIT	1		
-		65897A	POWER STEERING MOUNTING KIT	1		
1	57	68038	"V" BELT, HYDRAULIC PUMP C	1		
1	57	69143	"V" BELT, ALTERNATOR DRIVE	1		
2		65608	PULLEY, WATER CIRCULATING	1		
2		73483	PULLEY, WATER CIRCULATING	1		
3		62253	BRACKET, OIL COOLER	1		
4	54	37631	CLAMP, OIL COOLER TO ENGINE	2		
5	10	27165	SCREW, CLUMB FASTENING (3/8)	2		
6	13	35048	LOCKWASHER, OIL COOLER CLAMP	2		
7	11	32219	NUT, OIL COOLER CLAMP SCREW	2		
8		49535	OIL COOLER	1		
9	22	37760	ELBOW, RETURN HOSE TO OIL COOLER	2		
10	32	66348	HOSE, OUTLET - OIL COOLER	1		
11	54	32780	CLAMP, INTAKE AND OUTLET HOSE	2		
12	32	64909	HOSE, INTAKE - OIL COOLER TO ENGINE	1		
13	32	49533	HOSE, RETURN - OIL COOLER TO ENGINE	1		
14	54	37295	CLAMP, RETURN HOSE TO OIL COOLER	2		
15		68040	BRACKET, MOUNTING - HYDRAULIC PUMP	1		
16	10	34354	SCREW, MOUNTING BRACKET TO ENGINE	2		
17	13	35048	WASHER, MOUNTING BRACKET TO ENGINE	2		
18	10	34353	SCREW, BRACKET TO HYDRAULIC PUMP	1		
19	10	34354	SCREW, BRACKET TO HYDRAULIC PUMP	1		
20	13	35048	LOCKWASHER, MOUNTING BRACKET TO PUMP	1		
21	12	25970	WASHER, MOUNTING BRACKET TO PUMP	1		
22	23	56777	SPACER, MOUNTING BRACKET TO PUMP	1		
23		68039	BRACKET, CIRCUIT BREAKER	1		
24	10	20776	SCREW, BREAKER TO PUMP MOUNTING BRACKET	2		
25	13	26992	LOCKWASHER, CIRCUIT BREAKER TO PUMP MOUNTING BRACKET	2		
26		49181	PULLEY, HYDRAULIC PUMP	1		
27	12	21901	WASHER, HYDRAULIC PUMP TO MOUNTING BRACKET	1		
28	11	25899	NUT, PULLEY TO HYDRAULIC PUMP MOUNTING BRACKET	1		
29		68041	BRACE, TENSION - HYDRAULIC PUMP MOUNTING BRACKET	1		
30	10	37612	SCREW, BRACE TO HYDRAULIC PUMP MOUNTING BRACKET	1		
31	13	35048	LOCKWASHER, TENSION BRACE TO PUMP MOUNTING BRACKET	1		
32	12	25970	WASHER, MOUNTING BRACKET TO TENSION BRACE	1		
33	23	36534	SPACER, TENSION BRACE SCREW	1		
34	10	63826	SCREW, BRACE TO ENGINE MOUNTING BRACKET	1		