



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	50	69863A 1	STARTER MOTOR ASSEMBLY, C	1		
-	50	69864A	STARTER MOTOR ASSEMBLY, C	.1		
1		71696	HOUSING, DRIVE END	1,1		
2	23	33369	BUSHING, DRIVE END HOUS	1,1		
3		33292	COLLAR, THRUST - DRIVE ENC	1,1		
4	53	33290	RING, RETAINING - PINION ST	1,1		
5		33291	COLLAR, PINION STOP - DRIVE	1,1		
6		33318	DRIVE ASSEMBLY, CLUTCH - A	1,1		
7	23	33369	BUSHING, GEAR END - CLUT	1,1		
8	24	33368	SPRING, CLUTCH DRIVE	1,1		
9		N.S.S.	COLLAR, CLUTCH DRIVE (DE	1,1		
10		33367	LOCKSIRE, COLLAR AND SPF	1,1		
11		N.S.S.	PLATE, BEARING (DELCO REMY	1,1		
12	23	71694	BUSHING, BEARING PLATE	1,1		
13	12	68614	WASHER, BEARING PLATE	1,1		
14	10	68612	SCREW, BEARING PLATE ATT	2,2		
15	13	68611	LOCKWASHER, BEARING PLAT	2,2		
16		71693	ARMATURE	1,1		
17		N.S.S.	SHOE, POLE - FIELD COIL (DEL	4,4		
18	10	60684	SCREW, POLE SHOE TO FIELD	4,4		
19		33293	INSULATION, FIELD COIL	4,4		
20	25	45534	GROMMET, FIELD COIL - FIELD	1,1		
21		46891	FIELD COIL ASSEMBLY	1,		
21		71697	FIELD COIL ASSEMBLY	.1		
22		N.S.S.	COIL, SHUNT - FIELD COIL (DEL	.1		
23	12	33258	WASHER, LEATHER - COMMUT	1,1		
24		33295	FRAME, COMMUTATOR END - I	1,1		
25	10	33296	BOLT, THRU - COMMUTATOR E	1,1		
25	10	33286	BOLT, THRU - COMMUTATOR E	.1		
26		33284	HOLDER, INSULATED - FIELD F	2,2		
27		33283	HOLDER, FIELD FRAME BUSH	2,2		
28		33270	BRUSH, FIELD FRAME	4,4		
29	10	52904	SCREW, BRUSH LEAD TO FIEL	2,2		
29	10	60685	SCREW, RUCH LEAD TO FIELD	2,2		
30		33294	SUPPORT PACKAGE, GROUND	2,2		
31		N.S.S.	PIN, GROUND AND INSULATI	2,2		
32		60686	LEAD, FIELD FRAME BRUSH	2,2		
33		N.S.S.	SCREW, SUPPORT TO FIELD	4,4		
34	13	26996	LOCKWASHER, SUPPORT SC	4,4		
35	11	30968	NUT, SUPPORT SCREW	4,4		
36	24	33295	SPRING, FIELD FRAME BRUSH	4,4		