



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		33300	DISTRIBUTOR ASSEMBLY, COM	1		
2		33668	HOUSING, PRIMARY - DISTRIB	1		
3	43	33664	GEAR, DRIVE - MAIN SHAFT	1		
4		33766	MAIN SHAFT AND WEIGHT PL	1		
5	17	33649	PIN, DRIVE GEAR TO MAIN SH	1		
6		33767	CAM, BREAKER - ADVANCE	1		
-		33653	FELT, BREAKER CAM LUBRICA	1		
-		33670	RETAINER, BREAKER CAM LUB	1		
7		33768	WEIGHT, BREAKER CAM ADVA	2		
8	24	33769	SPRING, BREAKER CAM ADVA	2		
9		33655	PLATE, WEIGHT HOLD DOWN	1		
10	10	33656	SCREW, WEIGHT HOLD DOWN	2		
11		33665	PLATE, MOUNTING - BREAKER	1		
12	10	33648	SCREW, MOUNTING PLATE TC	2		
13		33662	CONDENSER	1		
14		34235	BREAKER ASSEMBLY, DISTRIB	1		
15	10	33650	SCREW, BREAKER ASSEMBLY	1		
16	25	33666	GROMMET, MOUNTING PLATE	1		
17		33658	LEAD, PRIMARY	1		
18		33659	ROTOR, DISTRIBUTOR	1		
19	12	36275	WASHER, ROTOR	1		
20		33765	CAP, DISTRIBUTOR	1		
21		33654	BUTTON, CARBON - DISTRIB	1		
22	10	33660	SCREW, DISTRIBUTOR CAP TC	1		
23	10	33663	SCREW, DISTRIBUTOR CAP TC	1		
24	27	34486	GASKET, DISTRIBUTOR	1		
25		32762A 1	LEAD ASSEMBLY, HIGH TENSIO	2		
26		32762A 2	LEAD ASSEMBLY, HIGH TENSIO	1		
27		32762A 3	LEAD ASSEMBLY, HIGH TENSIO	1		
28		32762A 4	LEAD ASSEMBLY, HIGH TENSIO	2		
29		20119	PROTECTOR, HIGH TENSION L	6		
--	393	1275	SLEEVE, TERMINAL END COVE	6		
30	33	37405	SPARK PLUG (AC#C-44N)	6		
31		32784	RETAINER, HIGH TENSION LEAC	1		
32		32783	RETAINER, HIGH TENSION LEAC	1		
33		32763A 1	WIRE ASSEMBLY, DISTRIBUTOF	1		
34		32704	COIL ASSEMBLY, IGNITION	1		
35		33321	BRACKET, IGNITION COIL MOU	1		
36	10	33311	SCREW, MOUNTING BRACKET	1		
37	54	33271	CLAMP, LOCK - IGNITION COIL	2		
38	11	22272	NUT, IGNITION COIL TERMINAL	2		