



| | | | | Parts List | | |
|-----|-------|-------|-----------------------------|------------|---------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| - | 50 | 32703 | STARTER MOTOR ASSEMBLY, C | 1 | | |
| 1 | | 33324 | HOUSING, DRIVE END | 1 | | |
| 2 | 23 | 33278 | BUSHING, DRIVE END HOUS | 1 | | |
| 3 | | 33292 | COLLAR, THRUST - DRIVE ENC | 1 | | |
| 4 | 53 | 33290 | RING, RETAINING - PINION ST | 1 | | |
| 5 | | 33291 | COLLAR, PINION STOP - DRIVE | 1 | | |
| 6 | | 33318 | DRIVE ASSEMBLY, CLUTCH - A | 1 | | |
| 7 | 23 | 33369 | BUSHING, GEAR END - CLUT | 1 | | |
| 8 | 24 | 33368 | SPRING, CLUTCH DRIVE | 1 | | |
| 9 | | 33366 | COLLAR, CLUTCH DRIVE | 1 | | |
| 10 | | 33367 | LOCKWIRE, COLLAR AND SP | 1 | | |
| 11 | 24 | 33306 | SPRING, SHIFT LEVER TENSIO | 1 | | |
| 12 | | 33320 | ARMATURE | 1 | | |
| 13 | | 33293 | INSULATION, POLE SHOE TO F | 4 | | |
| 14 | | 33282 | SHOE, POLE - FIELD COIL | 4 | | |
| 15 | 10 | 34582 | SCREW, POLE SHOE TO FIELD | 4 | | |
| 16 | 25 | 33302 | GROMMET, FIELD COIL - FIELD | 1 | | |
| 17 | | 33301 | FIELD COIL ASSEMBLY | 1 | | |
| 18 | 12 | 33258 | WASHER, LEATHER - COMMUT | 1 | | |
| 19 | | 33295 | FRAME, COMMUTATOR END - I | 1 | | |
| 20 | 10 | 33296 | BOLT, THRU - COMMUTATOR | 1 | | |
| 21 | 10 | 33286 | BOLT, THUR - COMMUTATOR | 1 | | |
| 22 | | 33284 | HOLDER, INSULATED - FIELD F | 2 | | |
| 23 | | 33283 | HOLDER, FIELD FRAME BRUSH | 2 | | |
| 24 | | 33270 | BRUSH, FIELD FRAME | 4 | | |
| 25 | 10 | 32024 | SCREW, BRUSH LEAD TO FIEL | 4 | | |
| 26 | | 33294 | SUPPORT PACKAGE, GROUND | 2 | | |
| 27 | 17 | 33280 | PIN, GROUND AND INSULATI | 1 | | |
| 28 | | 33281 | LEAD, FIELD FRAME BRUSH | 2 | | |
| 29 | 10 | 33250 | SCREW, SUPPORT TO FIELD | 4 | | |
| 30 | 13 | 26996 | LOCKWASHER, SUPPORT SC | 4 | | |
| 31 | 11 | 30968 | NUT, SUPPORT SCREW | 4 | | |
| 32 | 24 | 33285 | SPRING, FIELD FRAME BRUSH | 2 | | |
| 33 | 17 | 33257 | PIN, DOWEL - FIELD FRAME TC | 1 | | |
| 34 | | 33297 | LEVER, SHIFT - DRIVE END HO | 1 | | |
| 35 | | 33310 | SHAFT, SHIFT LEVER TO DRIV | 1 | | |
| 36 | 53 | 33354 | RING, RETAINING - SHIFT LEV | 1 | | |
| 37 | | 33317 | PLUNGER, SHIFT LEVER - SOL | 1 | | |
| 38 | 17 | 33256 | PIN, PLUNGER TO SHIFT LEVE | 1 | | |
| 39 | 24 | 33298 | SPRING, PLUNGER RETURN - | 1 | | |
| 40 | 10 | 28712 | SCREW, SOLENOID SWITCH T | 2 | | |