



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
	1338	2991	CARBURETOR ASSEMBLY, COM	1	SERIAL 00000000-02492035	
	1351	3635A 1	CARBURETOR ASSEMBLY, COM	1	SERIAL 02492036-09999999	
1	1397	2635	AIR HORN	1	SERIAL 00000000-02492035	
1	1397	3852	AIR HORN	1	SERIAL 02492036-09999999	
2	1397	2256	POWER PISTON ASSEMBLY	1		
3			GASKET, AIR HORN	1		0,3,4
4	10	33043	SCREW, AIR HORN TO FLOAT	7		
5	10	33048	SCREW, AIR HORN TO FLOAT	1		
6	13	26996	LOCKWASHER, AIR HORN SCF	8		
7	11	33631	NUT, FUEL INLET - AIR HORN	1	SERIAL 00000000-02492035	
8			GASKET, FUEL INLET NUT	1	SERIAL 00000000-02492035	0,3,4
9	1397	2060	FLOAT ASSEMBLY	1		
10	17	33037	PIN, LINGE - FLOAT TO AIR HO	1		
11			INLET NEEDLE AND SEAT ASSEI	1		0,4
12			GASKET, INLET NEEDLE AND S	1		0,3,4
13			STRAINER, INLET NEEDLE ANI	1		0,3,4
14	1397	2993	FLOAT BOWL ASSEMBLY	1		
15	1397	2640	VENTURI CLUSTER ASSEMBLY	1		
16			GASKET, VENTURI CLUSTER	1		0,3,4
17	10	33034	SCREW, VENTURI CLUSTER T	1		
18			GASKET, VENTURI CLUSTER E	1		0,3,4
19	10	33033	SCREW, VENTGURI CLUSTER	2		
20	13	26995	LOCKWASHER, VENTURI CLUS	2		
21			GUIDE, PUMP DISCHARGE - FL	1		0
22			SPRING, PUMP DISCHARGE - F	1		0
23			BALL, PUMP DISCHARGE - FLO	1		0
24			POWER VALVE ASSEMBLY, FLI	1		0
25			GASKET, POWER VALVE	1		0,3,4
26	1397	2994	JET, FLOAT BOWL (STANDARC	1		
27			STRAINER, PUMP INLET	1		
28	1397	2048	LEVER, PUMP - AIR HORN	1		0
29	10	46276	SCREW, AIR HORN PUMP LEVI	1		
30	1397	2628	PUMP SHAFT AND LEVER ASS	1	SERIAL 00000000-02492035	
30	1397	2054	PUMP SHAFT AND LEVER ASS	1	SERIAL 02492036-09999999	
31	1397	2051	ROD, PUMP	1		
32			CLIP, RETAINER - PUMP ROD	1		0,4
33			PUMP ASSEMBLY, FLOAT BOW	1		0,4
34			CLIP, RETAINER - FLOAT BOW	1		0,4
35			SPRING, PUMP RETURN - FLO	1		0
36			BALL, CHECK - PUMP INLET - F	1		0
37			GASKET, THROTTLE BODY	1		0,3,4