



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		99438A 1	HEAT EXCHANGER	1		
2	22	32802	PIPE PLUG, HEAD EXCHANGE	2		
3	27	99960	GASKET, END CAP	2		
4		99961	PLATE, END CAP	2		
5	10	99962	SCREW, END CAP - HEAD EXCI	2		
6		98618A 1	BRACKET ASSEMBLY, HEAT EXC	1		
7		41024	MOUNT, VIBRATION	6		
8		77223	PAD, MOUNTING BRACKET	2		
9	12	31263	WASHER, MOUNT STUD	3		
10	11	34933	NUT, MOUNT STUD	3		
11	16	41025	STUD, BRACKET	3		
12		98620	STRAP, BRACKET TO HEAT EXC	2		
13	10	98619A 1	"U" BOLT, HEAT EXCHANGER	2		
14	11	26484	NUT, "U" BOLT	4		
15	32	99520	HOSE, HEAT EXCHANGER TO RE	1		
16	32	42850 64	HOSE, WATER INLET	1		
17	54	43510	CLAMP, HOSE ATTACHING	4		
18	32	77245	HOSE, THERMOSTAT HOUSING	1		
19	54	32780	CLAMP, HOSE ATTACHING	2		
20	32	99729	HOSE, EXHAUST MANIFOLD TO	1		
21	54	32780	CLAMP, HOSE TO HEAD EXCHAN	1		
22	54	32781	CLAMP, HOSE TO EXHAUST MAN	1		
23	32	33220 70	HOSE, COOLER TO HEAD EXCH/	1		
24	32	95850	HOSE, COOLER TO EXHAUST EL	1		
25	54	32780	CLAMP, HOSE ATTACHING -W/P	4		
26		99356A 1	OIL COOLER-W/POWER STEERI	1		
27	32	33220 70	HOSE, HEAT EXCHANGER TO EX	1		
28	54	32780	CLAMP, HOSE ATTACHING-W/D	2		