



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	1547	5523A18	DRIVE SHAFT HOUSING ASSEMBLY	1		
2	16	56295	STUD, DRIVE SHAFT HOUSING	2		
3	22	31704	PLUG, PIPE - DRIVE SHAFT HOUSING	1		
4	19	32652	WELCH PLUG, DRIVE SHAFT HOUSING	1		
5	23	32632	BUSHING, DRIVE SHAFT HOUSING	1		
6	11	34933	NUT, GEAR HOUSING TO DRIVE SHAFT	3		
7	19	32298	PLUG, TRIM TAB HOLE (13/32" DIA)	1	OPT.	
7	19	47579	PLUG, TRIM TAB HOLE (1/2" DIA)	1	OPT.	
8	10	79953	SCREW, DRIVE SHAFT HOUSING	1		
9	12	20260	WASHER, DRIVE SHAFT HOUSING	1		
10		58858A	UNIVERSAL JOINT ASSEMBLY, CENTER	1		
10		59829A	UNIVERSAL JOINT ASSEMBLY, CENTER	1		
11		46020	YOKE, UNIVERSAL JOINT - GEAR	1		
12		39383	SOCKET, CENTER - UNIVERSAL JOINT	1		
13		75832	CROSS AND BEARING ASSEMBLY	2		
14		39385A	YOKE ASSEMBLY, UNIVERSAL JOINT	1		
14		59830A	YOKE ASSEMBLY, UNIVERSAL JOINT	1		
15	25	25439	"O" RING, UNIVERSAL JOINT	2		15
16		66071	RETAINER, TAPERED ROLLER BEARING	1		
17		35983	RING, ROLLER BEARING RETAINER	1		
18	25	70937	"O" RING, OIL SEAL CARRIER	1		17
19		66081A	CARRIER ASSEMBLY, OIL SEAL	1		
20	26	68493	OIL SEAL, CARRIER	1		17
21	31	35988A	ROLLER BEARING ASSEMBLY, DRIVE	1		
22	23	35985	SPACER, ROLLER BEARING ASSEMBLY	1		
23	15	35980A	SHIM, BEARING CUP TO DRIVE SHAFT	1		
24	15	71013	SHIM, BEARING CUP TO DRIVE SHAFT	1		
25	43	55765A	GEAR ASSEMBLY, COMPLETE	1		
25	43	55765A	GEAR ASSEMBLY, COMPLETE	1		
25	43	75324A	GEAR ASSEMBLY, COMPLETE	1		
25	43	59832A	GEAR ASSEMBLY, COMPLETE	1		
26	31	35990A	ROLLER BEARING ASSEMBLY, DRIVE	1		
27	12	45810	WASHER, DRIVE GEAR TO UNIVERSAL JOINT	1		
28	11	22339	NUT, DRIVE GEAR TO UNIVERSAL JOINT	1		