



DISTRIBUTOR AND IGNITION COMPONENTS

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		90747A15	DISTRIBUTOR ASSEMBLY	1		
2		13753A 2	CAP, DISTRIBUTOR	1		
3	10	90926	SCREW, DISTRIBUTOR CAP	4		
4	27	98242 1	GASKET, DISTRIBUTOR CAP	1		
5		13524A 6	ROTOR/SENSOR WHEEL	1		
11	87	91019A 3	SENSOR ASSEMBLY	1		
12	10	66686	SCREW, SENSOR (1")	1		
12	10	72202	SCREW, SENSOR (1-1/4")	1		
13	43	813776 1	GEAR, DRIVE	1		
14	17	47617	PIN, DRIVE GEAR	1		
15	27	34486 3	GASKET, DISTRIBUTOR	1		2
16		52185	CLAMP, DISTRIBUTOR TO INTAK	1		
17	10	11976	SCREW, DISTRIBUTOR CLAMP (	1		
18	13	26996	LOCKWASHER, DISTRIBUTOR T	2		
19	11	68219	NUT, DISTRIBUTOR TERMINAL (	2		
20	84	813720A11	SPARK PLUG WIRE KIT	1		
21	85	63709A 1	BOOT ASSEMBLY, SPARK PLUG	8		
22	33	59571	SPARK PLUG	8		
23		54676	RETAINER, HIGH TENSION LEAD	2		
24		32783	RETAINER, HIGH TENSION LEAD	4		
25		32784	RETAINER, HIGH TENSION LEAD	2		
26	392	7803A 4	COIL, IGNITION	1		
27		65970	BRACKET, IGNITION COIL	1		
28	10	41408	SCREW, BRACKET (1-1/2")	1		
29	12	30164	WASHER, IGNITION COIL TERMINAL	2		
30	13	26996	LOCKWASHER, IGNITION COIL T	2		
31	11	68219	NUT, IGNITION COIL TERMINAL	2		
32	10	98260	SCREW, IGNITION COIL	1		
33	13	35048	LOCKWASHER, IGNITION COIL S	1		
34	16	90096A 1	STUD ASSEMBLY - NEW DESIGN	2		
35	54	72821	RETAINER, WIRE - NEW DESIGN	2		