



Parts List

Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	12177A 2	STARTER MOTOR ASSEMBLY - L	1		
2	10	94435	SCREW, STARTER MOTOR - USE	2		
3		12404	BRACE, STARTER MOTOR - USE	1		
4	12	29245	WASHER, STARTER MOTOR STI	2		
5	10	35765A 1	SCREW, BRACE TO ENGINE (5/8	1		
7	50	812428A 3	STARTER MOTOR ASSEMBLY - L	1		
2	10	813642	SCREW, STARTER MOTOR - US	2		
6	11	15874	NUT, BATTERY TERMINAL (10M	1		
6	11	72008	NUT, BATTERY TERMINAL (1/4-2	1		
8	11	26419	NUT, SOLENOID SWITCH TERMI	2		
8	11	40021 1	NUT, SOLENOID SWITCH TERMI	2		
9		92497A 3	ALTERNATOR (55 AMP)	1		
10	13	26996	LOCKWASHER, ALTERNATOR TI	1		
11	12	96457	WASHER, ALTERNATOR TERMI	1		
12	11	79989	NUT, ALTERNATOR TERMINAL (1		
13	13	21272	LOCKWASHER, ALTERNATOR TI	1		
14	11	64015	NUT, ALTERNATOR TERMINAL (1		
15		85013	BRACE, ALTERNATOR ADJUSTI	1		
16	10	98261	SCREW, ALTERNATOR BRACE	1		
17	13	35048	LOCKWASHER, ALTERNATOR BI	1		
18	85	79695	INSULATOR, BOOT - STARTER T	1		
19	10	29198	SCREW, ALTERNATOR BRACE	1		
20	12	26168	WASHER, ALTERNATOR BRACE	1		
21	23	52095	SPACER, ALTERNATOR BRACE	1		
22		57908 11	TUBING, ALTERNATOR LEADS	2		
23		87115A 1	BRACKET, ALTERNATOR/PUMP	1		
24	10	37612	SCREW, ALTERNATOR BRACKE	2		
24	10	34354	SCREW, ALTERNATOR BRACKE	1		
25	13	35048	LOCKWASHER, ALTERNATOR BI	3		
26	10	48308	SCREW, ALTERNATOR (3-3/4")	1		
27	12	20553	WASHER, ALTERNATOR SCREW	1		
28	12	34714	WASHER, ALTERNATOR SCREW	1		
29	23	33186	BUSHING, ALTERNATOR SCREW	1		
30	11	23161	NUT, ALTERNATOR SCREW - C	1		
31		15083T	BRACKET, ALTERNATOR/PUMP	1		
32	10	37612	SCREW, ALTERNATOR/PUMP BI	2		
33	13	35048	LOCKWASHER, BRACKET SCREW	2		
32	10	34353	SCREW, ALTERNATOR/PUMP BI	1		
33	12	46132	WASHER, BRACKET SCREW - S	1		
34	10	56743	SCREW, ALTERNATOR (3-1/8")	1		
35	12	24714	WASHER, ALTERNATOR SCREW	1		