



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1	84	99510A 2	WIRING HARNESS	1	
2		26079	PLATE, WIRING HARNESS TO M	1	
3	10	34696	SCREW, WIRING HARNESS PLA	4	
4		98493A 1	BRACKET, MONTING	1	
5	10	49668	SCREW, MOUNTING BRACKET	3	
6	13	26992	LOCKWASHER, MOUNTING BRA	3	
7		97258A 1	WATER TEMPERATURE SENDEI	1	
7		49734A 1	WATER TEMPERATURE SENDER	OPT	
8	13	26996	LOCKWASHER, WATER TMEPE	1	
9	11	68219	NUT, WATER TEMPERATURE	1	
10		90806	OIL PRESSURE SENDER ASSEM	1	
10		37293	OIL PRESSURE SENDER ASSEM	OPT	
11	13	26996	LOCKWASHER, OIL PRESSURE	1	
12	11	68219	NUT, OIL PRESSURE SENDER T	1	
13	22	46932	ELBOW, OIL PRESSURE SENDEI	1	
14	22	42554	NIPPLE, OILPRESSURE SENDER	1	
15		41170A 2	BRACKET, MOUNTING	1	
16	10	98260	SCREW, MOUNTIG BRACKET (5/	1	
17	13	35048	LOCKWASHER, MOUNTING BRA	1	
18	54	78945	CLAMP, BRACKET SCREW	1	
19	16	56826	STUD, MOUNTING BRACKET	1	
20	23	57369	SPACER, MOUNTING BRACKET	1	
21	12	20572	WASHER, MOUNTING BRACKET	1	
22	13	35048	LOCKWASHER, MOUNTING BRA	1	
23	11	24883	NUT, MOUNTING BRACKET STU	1	
24	88	93582	CIRCUIT BREAKER (60 AMP)	AR	
24	88	11178	CIRCUIT BREAKER (50 AMP)	AR	
25	13	26996	LOCKWASHER, CIRCUIT BREAKI	2	
26	11	68219	NUT, CIRCUIT BREAKER TERMIN	2	
27	10	45862	SCREW, CIRCUIT BREAKER (7/8	2	
28	10	45218	SCREW, INSULATOR (3/8")	1	
29	12	56681	WASHERM CICUIT BREAKER SC	3	
30	11	46438	NUT, INSULATOR SCREW	3	
31	85	96819	INSULATOR, CIRCUIT BREAKER	1	
32	89	96054	STARTER SOLENOID	1	
33	10	47910	SCREW, STARTER SOLENOID (5	2	
34	11	20088	NUT, STARTER SOLENOID SCRE	2	
35	13	26992	LOCKWASHER, STARTER SOLEI	2	
36	11	26419	NUT, STARTER SOLENOID TERM	2	
37	11	94330	NUT, STARTER SOLENOID TERM	2	
38		46915	TERMINAL BLOCK	1	