



Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1		34100	WIRING HARNESS, EXTERNAL	1,1,1			
2	54	33361	CLIP, WIRING HARNESS LEADS	2,2,2			
3		34141	VOLTAGE REGULATOR	1,1,1			
4		33614A 1	MOUNT ASSEMBLY, VOLTAGE R	1,1,1			
5	10	29238	SCREW, VOLTAGE REGULATO	3,3,3			
6	10	33615	SCREW, VOLTAGE REGULATO	2,2,2			
7	12	22887	WASHER, VOLTAGE REGULAT	4,4,4			
8	23	28626	SPACER, VOLTAGE REGULATC	2,2,2			
9	25	28627	GROMMET, VOLTAGE REGULA	2,2,2			
10		25661	STARTER SOLENOID	1,1,1			
11	10	29238	SCREW, STARTER SOLENOID TI	2,2,2			
12	13	26993	LOCKWASHER, STARTER SOLEI	2,2,2			
13	11	20083	NUT, STARTER SOLENOID TERM	2,2,2			
14	13	26996	LOCKWASHER, STARTER SOLEI	2,2,2			
15	11	20645	NUT, STARTER SOLENOID TERM	2,2,2			
16		33396	BRACKET, MOUNTING - STARTE	1,1,1			
17	10	27165	SCREW, MOUNTING BRACKET T	3,3,3			
18	50	32703	STARTER MOTOR ASSEMBLY (S	1,1,1			
19		32786	TAB, SOLENOID TERMINAL AND	2,2,2			
20	54	22690	CLIP, WIRING HARNESS TO STA	1,1,1			
21	10	20566	SCREW, WIRING HARNESS CLIP	1,1,1			
22	13	26995	LOCKWASHER, WIRING HARNE	1,1,1			
23		22789	"D" WASHER, WIRING HARNESS	1,1,1			
24	11	26419	NUT, WIRING HARNESS CLIP SC	1,1,1			
25	10	34545	BOLT, STARTER MOTOR TO CYL	1,1,1			
26	10	34544	BOLT, STARTER MOTOR TO CYL	1,1,1			
27	12	35362	WASHER, STARTER MOTOR BO	1,1,1			
28	11	28517	NUT, SOLENOID SWITCH TERMI	1,1,1			
29	10	20566	SCREW, WIRING HARNESS LEA	1,1,1			
30	13	26995	LOCKWASHER, WIRING HARNE	1,1,1			
31	11	26419	NUT, WIRING HARNESS LEAD SC	1,1,1			
32	13	26996	LOCKWASHER, SOLENOID SWIT	1,1,1			
33	11	20645	NUT, SOLENOID SWITCH TERMI	1,1,1			
34		35363	BRACE, STARTER MOTOR	1,1,1			
35	10	35192	SCREW, STARTER MOTOR BRAI	1,1,1			
35	10	35765	SCREW, STARTER MOTOR BRAI	1,1,1			
36	13	35367	LOCKWASHER, BRACE TO STAR	1,1,1			
37	11	20890	NUT, BRACE TO STARTER MOT	1,1,1			
38	13	26995	LOCKWASHER, SOLENOID SWIT	1,1,1			
39	11	26419	NUT, SOLENOID SWITCH TERMI	1,1,1			
40		22828	WATER TEMPERATURE SENSE	1,1,1			