



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	46	32901A 2	WATER PUMP ASSEMBLY, COM	1,1,1		
1	46	32899A 1	BEARING HOUSING ASSEMBLY	1,1,1		
2	17	33166	PIN, DOWEL - BEARING HOUSIN	1,1,1		
3	26	33215	OIL SEAL, BEARING HOUSIN	2,2,2		
4	30	33451	BEARING, BALL - BEARING H	1,1,1		
5	53	33452	RING, SNAP - BALL BEARING TO	1,1,1		
6	13	33165	WELCH PLUG, BEARING HOUSIN	1,1,1		
7	27	33176	GASKET, BEARING HOUSING TO	1,1,1		
8		32837	PLATE, FACE - BEARING HOUSIN	1,1,1		
9	27	33175	GASKET, REAR BODY TO FACE F	1,1,1		
10	47	30221	IMPELLER, REAR BODY	1,1,1		
11	17	29967	PIN, IMPELLER DRIVE - REAR BC	1,1,1		
12	46	32900A 1	WATER PUMP BODY ASSEMBLY	1,1,1		
13		30915	INSERT, REAR BODY	1,1,1		
14	17	3316	PIN, DOWEL - REAR BODY	1,1,1		
15	27	33174	GASKET, REAR BODY TO FRON	1,1,1		
16	46	32901A 1	WATER PUMP BODY ASSEMBLY	1,1,1		
17		30915	INSERT, FRONT BODY	1,1,1		
18	47	30221	IMPELLER, FRONT BODY	1,1,1		
19	17	29967	PIN, IMPELLER DRIVE - FRONT E	1,1,1		
20	45	35878	SHAFT, WATER PUMP	1,1,1		
21	28	30250	KEY, WATER PUMP PULLEY DRI	1,1,1		
22	27	33175	GASKET, FRONT BODY TO FACE	1,1,1		
23		32836	PLATE, FACE - BEARING HOUSIN	1,1,1		
24	27	33176	GASKET, BEARING HOUSING TO	1,1,1		
25	46	32896A 1	BEARING HOUSING ASSEMBLY,	1,1,1		
26	17	33166	PIN, DOWEL - BEARING HOUS	1,1,1		
27	26	33215	OIL SEAL, BEARING HOUSIN	2,2,2		
28	30	33451	BEARING, BALL - BEARING HOUS	1,1,1		
29	53	33452	RING, SNAP - BALL BEARING	1,1,1		
30	23	33477	SPACER, WATER PUMP PULLEY	1,1,1		
31		35938	PULLEY, WATER PUMP	1,1,1		
32	12	20959	WASHER, WATER PUMP SHAFT	1,1,1		
33	11	20220	NUT, WATER PUMP SHAFT	1,1,1		
34	10	33160	SCREW, OUTLET HOUSING TO I	3,3,3		
35	11	29250	NUT, BEARING HOUSING SCREW	3,3,3		
-	27	35758A	GASKET SET, WATER PUMP	1,1,1		
36		32895	BRACE, WATER PUMP MOUNTIN	1,1,1		
37	10	24217	SCREW, BRACE TO FRONT MOU	1,1,1		
38	12	20553	WASHER, WATER PUMP BRACE	AR,AR,		
39	11	26369	NUT, WATER PUMP BRACE SCR	1,1,1		