
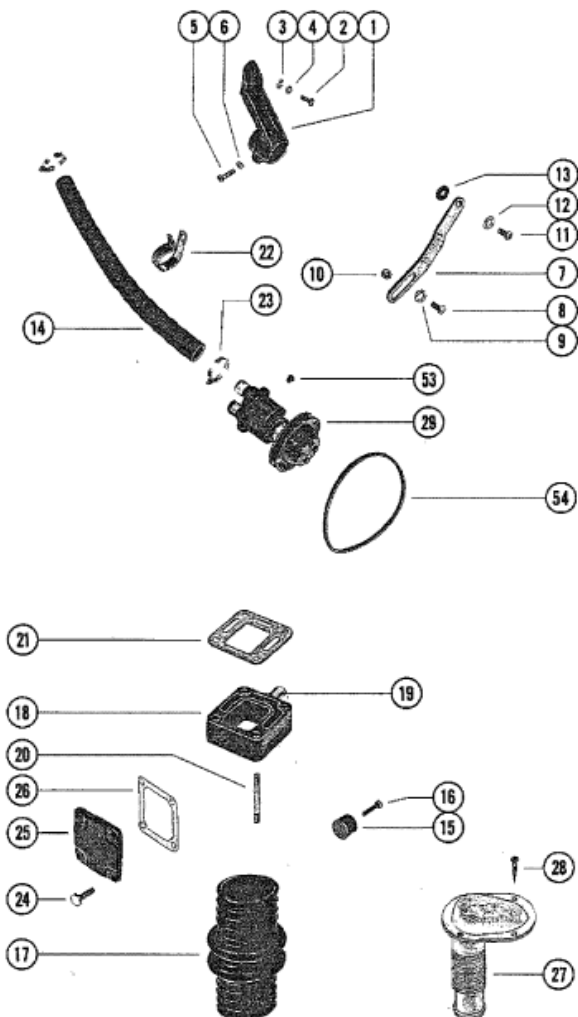


BREAKDOWN OF WATER PUMP

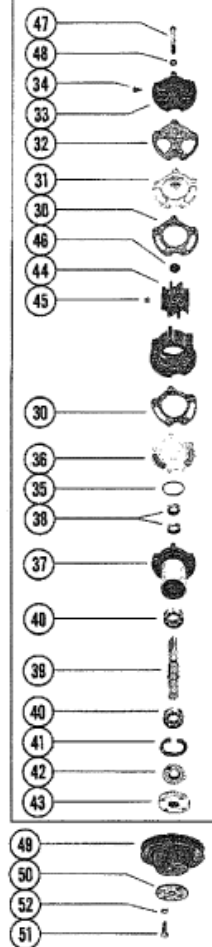

Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
-	-	77518A	1 INSTALLATION KIT, FRESH WAT	1		
1		47488	BRACKET, WATER PUMP	1		
2	10	34353	SCREW, WATER PUMP BRACK	2		
3	12	20553	WASHER, WATER PUMP BRAC	1		
4	13	35048	LOCKWASHER, WATER PUMPI	2		
5	10	34354	SCREW, CLAMPING - WATER I	1		
6	13	35048	LOCKWASHER, WATER PUMP	1		
7		71648	BRACE, WATER PUMP	1		
8	10	35786	SCREW, WATER PUMP BRACE T	1		
9	13	37459	LOCKWASHER, WATER PUMP B	1		
10	11	24883	NUT, WATER PUMP BRACE TO E	1		
11	10	37612	SCREW, BRACE TO ENGINE (1	1		
12	13	35048	LOCKWASHER	1		
13	23	72057	SPACER	1		
14	32	49044	HOSE, WATER PUMP TO THERM	1		
15		32877	COVER, WATER STOP - GIMBAL	1		
16	10	53556	SCREW, WATER STOP COVER F	2		
17		72408	BELLOWS, EXHAUST ELBOW	2		
18		61937A	1 WATER DISTRIBUTION HOUSINI	2		
19	23	52020	SLEEVE, WATER DISTRIBUTIO	2		
20	16	52988	STUD, EXHAUST MANIFOLD TO	8		
21	27	52076	GASKET, EXHAUST MANIFOLE T	4		
22	54	47715	CLIP, HOSE ATTACHING	1		
23	54	32780	CLAMP, HOSE TO WATER PUMP	2		
24	10	25299	SCREW, END CAP ATTACHING (8		
25		73813A	1 END CAP, EXHAUST MANIFOLD	2		
26	27	73814	GASKET, END CAP TO XHAUST	2		
27		68670A	2 THRU HULL WATER INTAKE AS	1		
28	10	68864	SCREW, WATER INTAKE ATTA	4		
-	92	38927	1 LOCTITE, CAPSULE - WATER II	1		
29	46	72774A	1 WATER PUMP ASSEMBLY	1		
30	27	72780	GASKET, WATER PUMP BODY	2		
31		72777	WEAR PLATE	1		
32	27	72779	GASKET, COVER TO OUTER w	1		
33		72776	COVER, WATER PUMP	1		
34	10	28642	SCREW, WATER PUMP DRIVE	4		
35	25	37340	"O" RING, PUMP HOUSING TO	1		
36		72778	WEAR PLATE	1		
37	46	71497A	2 PUMP HOUSING	1		
38	26	23300	OIL SEAL, WATER PUMP SH/	2		
39		68601	1 SHAFT, WATER PUMP	1		