


BREAKDOWN OF WATER PUMP

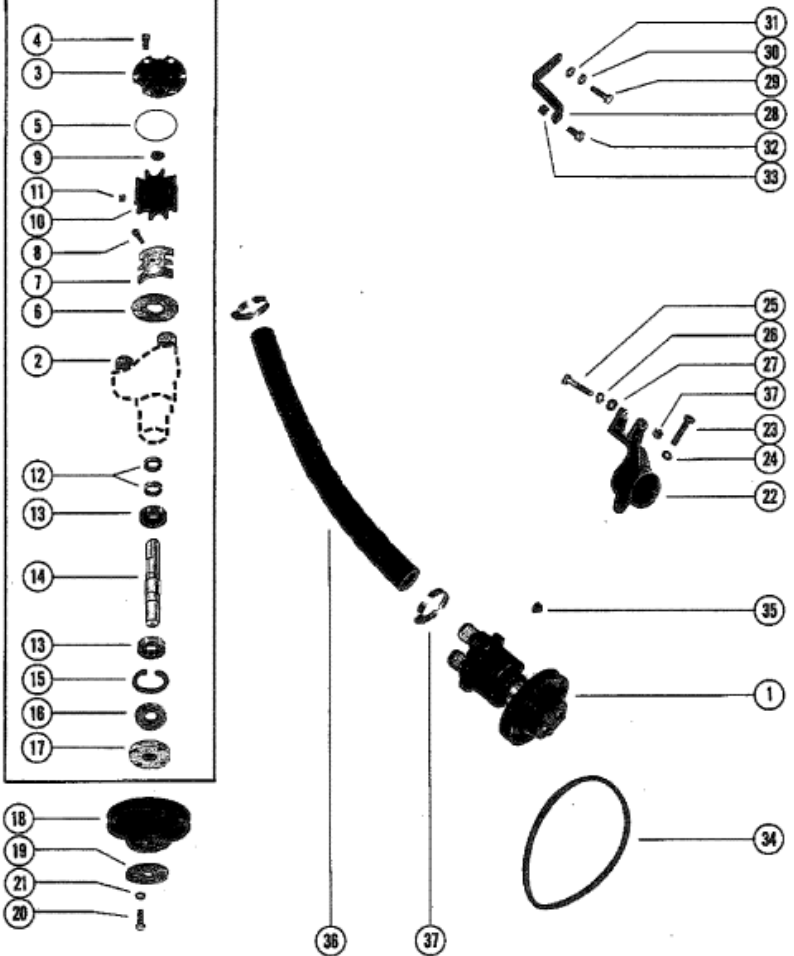

Parts List					Qty	Comment	Footnote
Ref	Class	Part	Description				
1	46	73823A 7	WATER PUMP ASSEMBLY (PLAS	1			
2	23	47511	SLEEVE, WATER (OUTLET ANE	2			
3		59155	COVER, WATER PUMP	1			
4	10	28635	SCREW, COVER TO BODY	6			
5	25	59712	"O" RING, WATER PUMP BOD	1			
6		59503	WEAR PLATE	1			
7		59363A 1	CAM SEGMENT ASSEMBLY	1			
8	10	60777	SCREW, CAM SEGMENT	1			
9	19	59504	PLUG, IMPELLER	1			
10	47	59362A 1	IMPELLER ASSEMBLY	1			
11	28	56662	KEY, IMPELLER DRIVE	1			
12	26	23300	OIL SEAL, WATER PUMP SHAF	2			
13	20	72961	BALL BEARING, WATER PUMP	2			
14		59501	SHAFT, WATER PUMP	1			
15	53	23720	RING, SNAP-BALL BEARING RE	1			
16	26	72785	OIL SEAL, WATER PUMP SHAF	1			
17		47530	HUB, WATER PUMP PULLEY	1			
18		73798	PULLEY, WATER PUMP	1			
19		58265	CLAMPING RING, PUMP PULLEY	1			
20	10	47277	SCREW, PULLEY TO WATER PU	4			
21	13	39107	LOCKWASHER, WATER PUMP P	4			
22		47488	BRACKET, WATER PUMP	1			
23	10	34354	SCREW, WATER PUMP BRACKE	1			
24	13	35048	LOCKWASHER, WATER PUMP B	1			
25	10	34353	SCREW, WATER PUMP BRACKE	1			
26	13	35048	LOCKWASHER, WATER PUMP B	1			
27	12	20553	WASHER, WATER PUMP BRACK	1			
28		47544	BRACE, WATER PUMP ADJUSTI	1			
29	10	34353	SCREW, BRACE TO STEERING F	1			
30	13	35048	LOCKWASHER, ADJUSTING BRA	1			
31	12	34714	WASHER, ADJUSTING BRACE SC	1			
32	10	35786	SCREW, ADJUSTING BRACE TO	1			
33	11	24883	NUT, ADJUSTING BRACE SCREW	1			
34	57	74271	BELT, WATER PUMP	1			
35	22	32802	PLUG, PIPE (FOR WATER PUMP	1			
36	32	57230	HOSE, MOLDED-WATER PUMP T	1			
37	54	32780	CLAMP, HOSE ATTACHING	2			