



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		98626A	EXHAUST SEPARATOR	1		
4	25	35029	"O" RING	1		
5		60931	RETAINER, WATER SHUTTER	1		
7		94018A	EXHAUST ELBOW ASSEMBLY	1		
8	10	58640	SCREW, EXHAUST ELBOW TO S	3		
9	13	58643	LOCKWASHER, EXHAUST ELBOV	3		
10	32	48659	HOSE, EXHAUST	2		
11	54	33683	CLAMP, EXHAUST HOSE	10		
12		94608A	EXHAUST TUBE ASSEMBLY	1		
13		41191A	EXHAUST ELBOW ASSEMBLY	1		
14		70981A	EXHAUST BELLOWS	1		
15		95740	GROUND STRAP, EXHAUST BEL	1		
16	54	31765	CLAMP, EXHAUST BELLOWS	2		
17		41063A	BRACKET ASSEMBLY, MOUNTIN	1		
18	10	24231	SCREW, BRACKET	1		
19	11	46438	NUT, BRACKET SCREW	1		
20		45915	TERMINAL BLOCK	1		
21		93925A	PLATE, EXHAUST SEPARATOR	1		
22	10	98794	SCREW, PLATE	3		
23	13	58643	LOCKWASHER, PLATE SCREW	3		