



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		12675A	FLYWHEEL HOUSING	1		
2		99297A	1 MOUNT, RUBBER - FLYWHEEL	2		
3	23	99322	SPACER, RUBBER MOUNT - F	2		
4	10	37612	SCREW, FLYWHEEL HOUSING A	3	(1-1/4")	
4	10	45754	SCREW, FLYWHEEL HOUSING A	2	(2")	
5	16	64066	STUD, FLYWHEEL HOUSING AT	1		
6	11	32219	NUT, FLYWHEEL HOUSING ATT	2		
7	13	35048	LOCKWASHER, FLYWHEEL HOU	8		
8	12	20572	WASHER, FLYWHEEL HOUSING	1		
9		13929A	2 COVER ASSEMBLY, FLYWHEEL	1		
10	27	96274	GASKET, FLYWHEEL HOUSING	1		
11	10	32773	SCREW, COVER TO FLYWHEEL	7	(SELF-TAP)	
11	10	28668	SCREW, COVER TO FLYWHEEL	7	(OLD DESIGN)	
12	84	62826A	6 WIRE, FLYWHEEL HOUSING STL	1		
-	27	52364A88	GASKET SET, ENGINE OVERHAL	1		