



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		79961	COVER, ROCKER	2		
2		49288	CAP, OIL FILLER	1		
3	10	35366	SCREW, ROCKER COVER	8	USE WITHOUT REINFORCEMENT	
4	27	52202	GASKET, ROCKER COVER	2	USE WITHOUT REINFORCEMENT	
4	27	11999	GASKET, ROCKER COVER	2	USE WITH REINFORCEMENT	4
5		11994	REINFORCEMENT, ROCKER COVER	8	USE WITH REINFORCEMENT	
6	16	11995	STUD, ROCKER COVER	8	USE WITH REINFORCEMENT	
7	11	11996	NUT, ROCKER COVER STUD	8	USE WITH REINFORCEMENT	
8		99948	ROD, VALVE PUSH (DOUBLE BALL)	16		
9		87284	VALVE, EXHAUST (STANDARD)	8		
9		87301	VALVE, EXHAUST (.015 O.S.) 228-	8		
10		94912	VALVE, INLET (STANDARD) 228-	8		
10		98603	VALVE, INLET (.015 O.S.) 228-230	8		
9		85803	VALVE, EXHAUST (STANDARD) 898-	8		
9		49076	VALVE, EXHAUST (.015 O.S.) 898-	8		
10		62421	VALVE, INLET (STANDARD) 898-	8		
10		62422	VALVE, INLET (.015 O.S.) 898-200	8		
11	26	34217	SEAL, VALVE (INLET AND EXHAUST)	16		4
12	26	97664	SEAL, VALVE (INLET)	8		4
13	24	48347	SPRING, VALVE (INLET AND EXHAUST)	16		
14		34518	SHIELD, VALVE SPRING CAP	16		
15		48348	CAP, INLET VALVE	8		
16		11965	ROTATOR, VALVE SPRING - EXHAUST	8		
17	28	54797	KEY, VALVE STEM	32		
18		35329	ARM, ROCKER VALVE	16		
19		35331	BALL UNIT, ROCKER VALVE ARM	16		
20	11	34516	NUT, ROCKER VALVE ARM STUD	16		
21	938	8549	CYLINDER HEAD ASSEMBLY (228-230)	2		
21	938	8162	CYLINDER HEAD ASSEMBLY (898-200)	2		
22	16	34522	STUD, ROCKER VALVE ARM (CYLINDER HEAD)	8		
22	16	34521	STUD, ROCKER VALVE ARM (CYLINDER HEAD)	8		
23	27	75611	GASKET, CYLINDER HEAD	2		4
24	10	11968	BOLT, CYLINDER HEAD TO CYLINDER	16		
25	10	11967	BOLT, CYLINDER HEAD TO CYLINDER	4		
26	10	11966	BOLT, CYLINDER HEAD TO CYLINDER	14		