



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		12675A	FLYWHEEL HOUSING	1		
2		99297A	MOUNT, RUBBER - FLYWHEEL	2		
3	23	99322	SPCAER, RUBBER MOUNT - F	2		
4	10	37612	SCREW, FLYWHEEL HOUSING A	4		
4	10	45754	SCERW, FLYWHEEL HOUSING A	1		
5	16	64066	STUD, FLYWHEEL HOUSING AT	1		
6	11	32219	NUT, FLYWHEEL HOUSING ATT	1		
7	13	35048	LOCKWASHER, FLYWHEEL HOU	7		
8	12	20572	WASHER, FLYWHEEL HOUSING	1		
9	54	78945	"J" CLAMP, FLYWHEEL HOUSING	1		
9	54	92850	CLAMP	2		
10		13929A	COVER (USE WITH 12-3/4" FLYW	1		9
10		96273A	COVER (USE WITH 14" FLYWHEI	1		9
11	27	96274	GASKET	1		9
12	10	28668	SCREW, COVER	7		8
10		13930A	COVER (USE WITH 14" FLYWHEI	1		4,8
11	27	96274	GASKET	1		8
12	10	32773	SCREW, COVER	7		
13	84	62826A	WIRE, FLYWHEEL HOUSING STL	1		

M0060-F8