



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		52073A	EXHAUST MANIFOLD ASSEMBLY	1		
2	16	49545	STUD, EXHAUST MANIFOLD TI	4		
3	22	48118	PLUG, EXHAUST MANIFOLD	4		
4	22	32802	PLUG, PIPE - EXHAUST MANIF	1		
5	22	32561	PLUG, PIPE - EXHAUST MANIF	1		
6	23	52097	SLEEVE, EXHAUST MANIFOLD	6		
7	10	52143	SCREW, EXHAUST MANIFOLD TI	6		
8	12	20553	WASHER, EXHAUST MANIFOLD	6		
9	54	22740	CLAMP, WIRING HARNESS TO E	2		
10	10	22028	SCREW, WIRING HARNESS CLAI	2		
11	13	26396	LOCKWASHER, WIRING HARNE	2		
12		22789	"D" WASHER, WIRING HARNE	2		
13		48045	END CAP, EXHAUST MANIFORD	1		
14	27	48043	GASKET, END CAP TO EXHAUST	1		
15	10	25038	SCREW, END CAP TO EXHAUST	4		
16	27	46041	GASKET, EXHAUST MANIFOLD	1		
17		49964A	EXHAUST ELBOW ASSEMBLY	1		
18	32	49705	TUBE, WATER SEPARATION-E	1		
19	22	48118	PLUG, EXHAUST ELBOW	4		
20	22	32802	PLUG, PIPE-EXHAUST ELBOW	1		
21	27	52076	GASKET, EXHAUST ELBOW TO E	1		
22	13	37459	LOCKWASHER, EXHAUST ELBO	4		
23	11	49838	NUT, EXHASUT ELBOW MANIFO	4		
24		48044	END CAP/CONNECTOR, EXHAUS	1		
25	27	48043	GASKET, END CAP/CONNECTOF	1		
26	10	25038	SCREW, END CAP/CONNECTOR	4		
27	54	33361	CLIP, WIRING HARNESS RETAIN	1		
28	10	20776	SCREW, WIRING HARNESS RET	1		
29	32	52481	HOSE, WATER DISTRIBUTION B	1		
30	54	32880	CLAMP, HOSE TO WATER DIST	2		
31		47587A	BLOCK ASSEMBLY, WATER DIST	1		
32	22	52089	ELBOW, WATER DISTRIBUTIO	1		
33	10	21077	SCREW, WATER DISTRIBUTION	2		
34	27	33680	GASKET, WATER DISTRIBUTION	1		
35		47588	COVER, THERMOSTAT-WATER	1		
36	27	47590	GASKET, THERMOSTAT COVER	1		
37		47594	THERMOSTAT	1		
38	10	53512	SCREW, THERMOSTAT COVER	2		
39	32	52099	HOSE, WATER DISTRIBUTION B	1		
40	54	32781	CLAMP, HOSE T WATER DISTRIB	2		
41		22877	COVER, WATER PUMP (1.1/15)	1		