



| Parts List | | | | | | |
|------------|-------|-------|-----------------------------|-----|--------------------------|----------|
| Ref | Class | Part | Description | Qty | Comment | Footnote |
| 1 | | 52636 | WIRING HARNESS, EXTERNAL | 1 | | |
| 2 | | 45108 | BATTERY CABLE, POSITIVE LUG | 1 | | |
| 2 | | 45107 | BATTERY CABLE, NEGATIVE LU | 1 | | |
| 3 | | 26079 | PLATE, WIRING HARNESS TO M | 1 | | |
| 4 | 10 | 46718 | SCREW, WIRING HARNESS PLA | 4 | | |
| 5 | 54 | 22627 | CLIP, WIRING HARNESS TO BOA | 2 | | |
| 6 | 10 | 22793 | SCREW, WOOD - WIRING HARNEI | 2 | | |
| 7 | | 22789 | "D" WASHER, WIRING HARNESS | 2 | | |
| 8 | 54 | 24836 | CLAMP, WIRING HARNESS TO M | 1 | | |
| 9 | 10 | 30268 | SCREW, CLAMP TO MANIFOLD | 1 | | |
| 10 | | 22789 | "D" WASHER, WIRING HARNESS | 1 | | |
| 11 | | 25661 | STARTER SOLENOID | 1 | | |
| 12 | 10 | 28063 | SCREW, STARTER SOLENOID TI | 2 | | |
| 13 | 13 | 26992 | LOCKWASHER, STARTER SOLEI | 2 | | |
| 14 | 13 | 26993 | LOCKWASHER, STARTER SOLEI | 2 | | |
| 15 | 11 | 20083 | NUT, STARTER SOLENOID TERM | 2 | | |
| 16 | | 46265 | BOOT, SOLENOID TERMINAL | 1 | | |
| 17 | 13 | 26996 | LOCKWASHER, STARTER SOLEI | 2 | | |
| 18 | 11 | 20645 | NUT, STARTER SOLENOID TERM | 2 | | |
| 19 | | 34623 | OIL PRESSURE SENDER ASSEM | 1 | | |
| 20 | 22 | 32974 | ADAPTOR, OIL PRESSURE SENC | 1 | | |
| 21 | 22 | 29085 | FITTING, OIL PRESSURE SENDE | 1 | SERIAL 02494936-09999999 | |
| 22 | 13 | 26996 | WASHER, WATER SENDER/OIL | 2 | | |
| 23 | 11 | 20645 | NUT, WATER SENDER/OIL PRE | 2 | | |
| 24 | | 36525 | WATER TEMPERATURE SENDEI | 1 | | |
| 25 | | 52676 | SWITCH, THERMAL - CHOKE | 1 | | |
| 26 | 13 | 26996 | LOCKWASHER, THERMAL SWITI | 1 | | |
| 27 | 11 | 20645 | NUT, THERMAL SWITCH TERMIN | 1 | | |
| 28 | | 37707 | VOLTAGE REGUALTOR, TRANSI | 1 | | |
| 29 | 10 | 37908 | SCREW, VOLTAGE REGULATOR | 3 | | |
| 30 | 12 | 20028 | WASHER, VOLTAGE REGULATO | 3 | | |