



M0045-H17

Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		96120A11	FLYWHEEL HOUSING (USE W/C	1	
1		12675A 5	FLYWHEEL HOUSING (USE W/S	1	
2		99297A 2	MOUNT, RUBBER - FLYWHEEL	2	
3	23	99322	SPACER, RUBBER MOUNT - FL	2	
4	10	37612	SCREW, FLYWHEEL HOUSING A	4	
4	10	45754	SCREW, FLYWHEEL HOUSING A	1	
5	16	64066	STUD, FLYWHEEL HOUSING AT	1	
6	11	32219	NUT, FLYWHEEL HOUSING ATT	1	
7	13	35048	LOCKWASHER, FLYWHEEL HOU	7	
8	12	20572	WASHER, FLYWHEEL HOUSING	1	
9	54	78945	"J" CLAMP, FLYWHEEL HOUSING	1	
9	54	92850	CLAMP	2	
10		96273A 6	COVER ASSEMBLY USE W/CAS	1	
11	27	96274	GASKET USE W/CAST COUPL	1	4
12	10	28668	SCREW, COVER USE W/CAST C	7	
10		13930A 3	COVER ASSEMBLY USE W/STA	1	
11	27	96274	GASKET USE W/STAMPED CO	1	4
12	10	32773	SCREW, COVER USE W/STAMP	7	
13	84	62826A 6	WIRE, FLYWHEEL HOUSING STL	1	