



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	749	4058	PISTON AND PISTON PIN ASSEM	8		
1	749	4059	PISTON AND PISTON PIN ASSEM	AR	USE STANDARD RING	
1	749	4060	PISTON AND PISTON PIN ASSEM	AR		
2	39	56114	RING ASSEMBLY, PISTON (STAN	8	EACH PART NUMBER INCLUDE	
2	39	56115	RING ASSEMBLY, PISTON (.020 C	AR	EACH PART NUMBER INCLUDE	
3	623	4679	CONNECTING ROD ASSEMBLY	8		
4	10	56123	BOLT, CONNECTING ROD	16		
5	11	56122	NUT, CONNECTING ROD BOLT	16		
6	23	56116	BEARING UNIT, CONNECTING RI	8		
6	23	56117	BEARING UNIT, CONNECTING RI	AR		
6	23	56118	BEARING UNIT, CONNECTING RI	AR		
6	23	56119	BEARING UNIT, CONNECTING RI	AR		
6	23	56121	BEARING UNIT, CONNECTING RI	AR		
7	446	4064	CRANKSHAFT (STANDARD ROTA	1		
7	446	4065	CRANKSHAFT (OPPOSITE ROTA	1		
8	23	55248	BEARING, CLUTCH PILOT (ELEC	1		
9	238	4428	FLYWHEEL ASSEMBLY (ELECTR	1		
9	238	4055	FLYWHEEL ASSEMBLY (HYDRAL	1		
10	10	60706	BOLT, FLYWHEEL TO CRANKSH	6	ELECTRIC SHIFT	
10	10	60705	BOLT, FLYWHEEL TO CRANKSH	6	HYDRAULIC SHIFT AND INBAOF	
11		47608	DRIVE PLATE, FLYWHEEL	1		
12	10	56889	SCREW, DRIVE PLATE TO FLYW	6		
13	13	26993	LOCKWASHER, DRIVE PLATE SC	6		
14	26	56868	OIL SEAL, CRANKSHAFT REAR (	1		
14	26	56869	OIL SEAL, CRANKSHAFT REAR (	1		
15	23	56890	BEARING, CRANKSHAFT MAIN -	4		
15	23	56892	BEARING, CRANKSHAFT MAIN -	AR		
15	23	56894	BEARING, CRANKSHAFT MAIN -	AR		
15	23	56896	BEARING, CRANKSHAFT MAIN -	AR		
15	23	56898	BEARING, CRANKSHAFT MAIN -	AR		
16	23	56898	BEARING, CRANKSHAFT MAIN -	1		
16	23	56893	BEARING, CRANKSHAFT MAIN -	AR		
16	23	56895	BEARING, CRANKSHAFT MAIN -	AR		
16	23	56897	BEARING, CRANKSHAFT MAIN -	AR		
16	23	56899	BEARING, CRANKSHAFT MAIN -	AR		
17	23	56900	BEARING, CRANKSHAFT MAIN -	4		
17	23	56902	BEARING, CRANKSHAFT MAIN -	AR		
17	23	56904	BEARING, CRANKSHAFT MAIN -	AR		
17	23	56906	BEARING, CRANKSHAFT MAIN -	AR		
17	23	56908	BEARING, CRANKSHAFT MAIN -	AR		
18	22	56901	BEARING, CRANKSHAFT MAIN -	1		