



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		61413	BRACKET, MOUNTING (FRONT)	2		
2	10	37269	SCREW, MOUNTING BRACKET T	3		
2	10	57357	SCREW, MOUNTING BRACKET T	1		
3	13	32993	LOCKWASHER, MOUNTING BRA	4		
3	12	34567	WASHER, MOUNTING BRACKET	2		
4	10	47654	SCREW, CLAMP - ADJUSTING TF	2		
5	13	32993	LOCKWASHER, CLAMP ADJUSTI	2		
6	54	47528	CLAMP, ADJUSTING TRUNNION	4		
7	11	29553	NUT, CLAMP ADJUSTING TRUNN	2		
8		52139A	BRACKET ASSEMBLY, MOUNTIN	2		
9		52753	MOUNT, MOUNTING BRACKET	4		
10	12	48611	WASHER, MOUNTING BRACKET	4		
11	10	52156	SCREW, ADJUSTING TRUNNION	2		
12	14	48467	TAB WASHER, ADJUSTING TRUI	2		
13	11	47525	NUT, JAM - ADJUSTING TRUNNII	2		
14	17	22116	PIN, ROLL - JAM NUT	2		
15		47518	TRUNNION, ADJUSTING - MOUN	2		
16		47986	BRACKET, MOUNTING - ENGINE	2		
17	10	48254	SCREW, MOUNTING BRACKET A	4		
18	13	31848	LOCKWASHER, MOUNTING BRA	4		