



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		47805	TRANSMISSION (DIRECT DRIVE)	1	71 SERIES	
1		47806	TRANSMISSION (1.523:1 REDUC	1	71 SERIES	
1		47807	TRANSMISSION (1.909:1 REDUC	1	71 SERIES	
1		47808	TRANSMISSION (2.57:1 REDUC	1	71 SERIES	
1		47809	TRANSMISSION (2.909:1 REDUC	1	71 SERIES	
2	10	47724	SCREW, TRANSMISSION TO EN	4		
3	16	45199	STUD, TRANSMISSION TO ENGI	2	USED ON B-47805 TRANS. ONL'	
4	13	32993	LOCKWASHER, TRANSMISSION	6		
5	11	22024	NUT, TRANSMISSION STUD	2	USED ON B-47805 TRANS. ONL'	
6	22	47629	ELBOW, HOSE TO TRANSMISSIC	1		
7	32	47516 1	HOSE, OIL COOLER TO TRANSM	1	USED ON B-47805 TRANS. ONL'	
7	32	47516 3	HOSE, OIL COOLER TO TRANS	1	USED ON ALL TRANS. EXCEPT	
8	22	47630	ELBOW, HOSE TO OIL COOLER	1		
9		47613	SWITCH, NEUTRAL SAFETY	1		
10		48381	FLANGE (1")	OPT		
10		48382	FLANGE (1 1/8")	OPT		
10		48383	FLANGE (1 1/4")	OPT		
10		48384	FLANGE (1 3/8")	OPT		
10		48385	FLANGE (1 1/2")	OPT		
11		48648	BRACKET, SHIFT CABLE	1		
12	12	37407	WASHER, SHIFT CABLE TO BRAI	1		
13	11	46438	NUT, SHIFT CABLE TO BRACKET	1		
14	22	47629	ELBOW, HOSE TO TRANSMISSIC	1	USED ON B-47805 TRANS. ONL'	
15	23	36159	BUSHING, REDUCING - TRANSM	1	USED ON TRANS. EXCEPT B-47	
16	22	47631	ELBOW, HOSE TO TRANSMISSIC	1	USED ON TRANS. EXCEPT B-47	
17	32	47516 4	HOSE, TRANSMISSION TO OIL C	1	USED ON B-47805 TRANS. ONL'	
17	32	47516 2	HOSE, TRANSMISSION TO OIL C	1	USED ON ALL TRANS. EXCEPT	
18	22	47630	ELBOW, HOSE TO OIL COOLER	1		
19		48515	LEVER, SHIFT TRANSMISSION	1		
20	12	20722	WASHER, SHIFT LEVER TO TRA	1		
21	13	26993	LOCKWASHER, SHIFT LEVER TC	1		
22	11	20083	NUT, SHIFT LEVER TO TRANSMI	1		
23		48652	ADAPTOR, SHIFT CABLE TO SHI	1		
24	16	48680	STUD, SHIFT CALBE ADAPTOR T	1		
25	12	20533	WASHER, SHIFT CABLE ADAPTC	1		
26	11	46887	NUT, SHIFT CABLE ADAPTOR ST	1		
27	13	29402	WAVE WASHER, SHIFT CABLE A	1		
28	12	37407	WASHER, SHIFT CABLE ADAPTC	1		
29	11	46438	NUT, SHIFT CABLE ADAPTOR ST	1		
30	10	20639	SCREW, SHIFT CABLE TO ADAP	1		
31	12	22752	WASHER, SHIFT CABLE SCREW	1		