



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		54092	PLATE, TRANSOM	1		
2	22	47902	VENT, OIL RESERVIOR (TRANSC	1		
3		54244A 1	COVER ASSEMBLY, OIL RESERV	1		
4	27	54307	GASKET, OIL RESERVIOR COVER	1		
5	10	54523	SCREW, OIL RESERVIOR COVER	8		
6		55083	DIPSTICK, OIL LEVEL-OIL RESER	1		
7	12	34876	WASHER, GIMBAL HOUSING TO	8		
8	11	35000	NUT, HOUSING TO TRANSOM PL	8		
9	10	47467	SCREW, TRANSOM PLATE TO FI	2		
10	12	54250	WASHER, TRANSOM PLATE SCF	2		
11	12	47466	WASHER, FIBER-TRANSOM PLA	4		
12	13	34846	LOCKWASHER, TRANSOM PLAT	2		
13	12	33171	WASHER, TRANSOM PLATE SCF	2		
14	11	22339	NUT, TRANSOM PLATE SCREW	2		
15		54234	COVER, EXHAUST	1		
16		55897	SEAL, EXHAUST COVER	1		
17	10	26065	SCREW, EXHAUST COVER TO TI	15		
18	11	29250	NUT, EXHAUST COVER SCREW	15		
19	10	24234	SCREW, EXHAUST COVER TO TI	2		
20	32	35015	TUBE, CABLE GUIDE	1		
21	11	37984	NUT, JAM-CABLE GUIDE TUBE	1		
22	22	34982	CONNECTOR, TRANSOM PLATE	1		
--	37	39395	DECAL, SERIAL NUMBER	1		