



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		58015A 2	DISTRIBUTOR ASSEMBLY, COMF	1	LEFT HAND CRANKSHAFT ROT.	
1		58016A 1	DISTRIBUTOR ASSEMBLY, COMF	1	RIGHT HAND CRANKSHAFT RO	
2	393	4988	CAP, DISTRIBUTOR	1		
2	37	54675	DECAL, DISTRIBUTOR CAP	1		
3		65864	ROTOR	1		
4		58256	SHIELD, DUST	1		
5		58028	WICK, LUBRICATION	1		
6		58027	RETAINER, CAM TO SHAFT	1		
7	10	58018	SCREW, BREAKER AND COND	3		
8		58034	CONDENSER	1		
9		58033	BREAKER ASSEMBLY	1		
10	13	26994	WASHER, PRIMARY TERMINAL	2		
11	11	58019	NUT, PRIMARY TERMINAL	2		
12	53	58030	RING, RETAINING - DISTRIBUT	2		
13		58029	BUMPER, DISTRIBUTOR SHAF	1		
14		58017	LEAD ASSEMBLY, PRIMARY TE	1		
15		58031	CLAMP, DISTRIBUTOR CAP AT	2		
16	17	58032	PIN, CLAMP TO DISTRIBUTOR	2		
17	12	58026	WASHER, THRUST - DISTRIBUT	1	RIGHT HAND CRANKSHAFT RO	
18		58022	COLLAR, THRUST	1		
19	43	58023	GEAR, DRIVE (LEFT HAND CRA	1		
19	43	58024	GEAR, DRIVE (RIGHT HAND CF	1		
20	17	58021	PIN, THRUST COLLAR AND DR	2		
21	27	58025	GASKET, DISTRIBUTOR	1		4
22		58258	CLAMP, DISTRIBUTOR TO INTAK	1		
23	10	58259	SCREW, DISTRIBUTOR CLAMP	1		
24	13	58260	LOCKWASHER, DISTRIBUTOR C	1		
25		54677 1	LEAD ASSEMBLY, DISTRIBUTOR	1	SERIAL 00000000-03040410	
25		60335	LEAD ASSEMBLY, DISTRIBUTOR	1	SERIAL 03040411-09999999	
26		26433	COIL, IGNITION	1		
27		33321	BRACKET, IGNITION COIL MOUN	1		
28	10	33311	SCREW, BRACKET TO IGNITION	1		
29	12	30164	WASHER, IGNITION COIL TERMI	2		
30	13	26996	LOCKWASHER, IGNITION COIL T	2		
31	11	20645	NUT, IGNITION COIL TERMINAL	2		
32	10	26632	SCREW, IGNITION COIL ATTACH	1	SERIAL 00000000-03040410	
32	10	34613	SCREW, IGNITION COIL ATTACH	1	SERIAL 03040411-09999999	
33	12	20553	WASHER, IGNITION COIL ATTAC	1		
34	23	49013	SPACER, IGNITION COIL ATTAC	1	SERIAL 00000000-03040410	
34	23	60339	SPACER, IGNITION COIL ATTAC	1	SERIAL 03040411-09999999	
35		47261A11	LEAD ASSEMBLY, HIGH TENSIO	1		