



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		54480	HOUSING, FLYWHEEL	1		
2	23	47511	SLEEVE, CONNECTING - FLYWHEEL	2		
3	22	32802	PLUG, DRAIN - FLYWHEEL HOUSING	1		
4		47542	COVER, FLYWHEEL HOUSING	1		
5	10	28635	SCREW, COVER TO FLYWHEEL HOUSING	4		
6	13	26992	LOCKWASHER, COVER SCREW	4		
7	38	47520	SERIAL PLATE	1		
8	10	20314	SCREW, SERIAL PLATE ATTACH	4		
9	10	47462	SCREW, FLYWHEEL HOUSING TO COVER	3		
10	10	54493	SCREW, FLYWHEEL HOUSING TO COVER	1		
10	10	47654	SCREW, FLYWHEEL HOUSING TO COVER	1		
11	12	57864	WASHER, SEALING - FLYWHEEL HOUSING	2		
12		47610	COOLER, OIL	1		
13		62288A	COVER ASSEMBLY, OIL COOLER	1		
13A	22	39072	PLUG, DRAIN - OIL COOLER COVER	1		
14	27	47495	GASKET, OIL COOLER COVER	1		
15	25	47632	"O" RING, SEALING - OIL COOLER COVER	2		
16	11	47521	NUT, JAM - OIL COOLER	2		
17	22	47917	ELECTRODE, OIL COOLER	1		
18	10	20362	SCREW, OIL COOLER COVER TO HOUSING	6		
19	12	36533	WASHER, OIL COOLER COVER TO HOUSING	2		
19	13	26993	LOCKWASHER, OIL COOLER COVER TO HOUSING	4		