



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		57815	WIRING HARNESS (STERN DRIV	1		
1		56388	WIRING HARNESS (STERN DRIV	1		
1		56385	WIRING HARNESS (INBOARD)	1	SERIAL 00000000-03040410	
1		59811	WIRING HARNESS (INBOARD)	1	SERIAL 03040411-03085036	
1	84	64600	WIRING HARNESS (INBOARD)	1	SERIAL 03258182-09999999	
2		45108	BATTERY CABLE, POSITIVE	1	LUG TYPE	
2		45107	BATTERY CABLE, NEGATIVE	1	LUG TYPE	
3		26079	PLATE, WIRING HARNESS TO M	1		
4	10	46718	SCREW, WIRING HARNESS PLA	4		
5		54227	BRACKET, MOUNTING - STARTE	1	HYDRAULIC SHIFT	
6	10	20359	SCREW, MOUNTING BRACKET A	1	HYDRAULIC SHIFT	
6	10	26632	SCREW, MOUNTING BRACKET A	1	HYDRAULIC SHIFT	
6	10	21077	SCREW, MOUNTING BRACKET A	2	HYDRAULIC SHIFT	
7	13	35048	LOCKWASHER, MOUNTING BRA	2	HYDRAULIC SHIFT	
8		39974	CONNECTOR, TRIM LEADS - MOI	2	HYDRAULIC SHIFT	
9	10	46718	SCREW, CONNECTOR TO MOUN	2	HYDRAULIC SHIFT	
8		39974	CONNECTOR, TRIM LEADS - MOI	2	ELECTRIC SHIFT	
9	10	23702	SCREW, CONNECTOR TO MOUN	2	ELECTRIC SHIFT	
10	12	26013	WASHER, CONNECTOR SCREW	2	ELECTRIC SHIFT	
11	11	46438	NUT, CONNECTOR SCREW	2	ELECTRIC SHIFT	
12		54869	BRACKET, MOUNTING - STARTE	1	ELECTRIC SHIFT	
13		36177	INSULATOR, SOLENOID TO MOL	1	ELECTRIC SHIFT	
14	54	54457	"J" CLIP, WIRING HARNESS TO F	1		
14	54	55098	"J" CLIP, WIRING HARNESS TO F	2		
15		25661	STARTER SOLENOID	1	HYDRAULIC SHIFT AND INBOAF	
16	10	28063	SCREW, STARTER SOLENOID TI	2	HYDRAULIC SHIFT AND INBOAF	
17	13	26992	LOCKWASHER, STARTER SOLEI	2	HYDRAULIC SHIFT AND INBOAF	
15		65057	STARTER SOLENOID	1	ELECTRIC SHIFT	
16	10	22956	SCREW, STARTER SOLENOID TI	2	ELECTRIC SHIFT	
17	12	22937	WASHER, STARTER SOLENOID	2	ELECTRIC SHIFT	
18	11	20586	NUT, STARTER SOLENOID SCRE	2	ELECTRIC SHIFT	
19	13	26996	LOCKWASHER, STARTER SOLEI	2		
20	11	20645	NUT, STARTER SOLENOID TERM	2		
21	13	26993	LOCKWASHER, STARTER SOLEI	2		
22	11	20083	NUT, STARTER SOLENOID TERM	2		
23		59816	CIRCUIT BREAKER	1	SERIAL 03040411-09999999	
23	10	36046	SCREW, CIRCUIT BREAKER	2	SERIAL 03040411-09999999	
24		59815	BRACKET, CIRCUIT BREAKER	1	INBOARD SERIAL 03040411-030	
25	10	24637	SCREW, CIRCUIT BREAKER TO I	2	INBOARD	
26	13	26996	LOCKWASHER, BRACKET AND C	3	INBOARD	
27	11	20645	NUT, CABLE CLIP AND BREAKER	2	INBOARD	