



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		36368	HYDRAULIC PUMP ASSEMBLY, F	1		
2		38333	CAP, FILLER - HYDRAULIC PUM	1		
3	32	55117	HOSE, RETURN - POWER STEEF	1	SERIAL 00000000-03386120	
3	32	65929	HOSE, RETURN - POWER STEEF	1	SERIAL 03523080-09999999	
3	32	65231	HOSE, RETURN - POWER STEEF	1	SERIAL 03523080-09999999	
4	54	35830	CLAMP, HOSE TO HYDRAULIC PI	3		
5	32	55116	HOSE, PRESSURE - POWER STE	1		
6		57969	CYLINDER, BOOSTER - POWER :	1		
7		26059	CAP, RUBBER - BOOSTER CYLIN	1		
8	32	57633	TUBE, EXTENDING - POWER STI	1		
9	32	57634	TUBE, RETRACTING - POWER S	1		
8	32	57632	TUBE, EXTENDING - POWER STI	1		
9	32	57631	TUBE, RETRACTING - POWER S	1		
10		52779	VALVE, POWER STEERING	1		
10A	22	67305	FITTING, GREASE - POWER VAL	1		
11	16	55109	STUD, ADAPTOR - POWER STEE	1		
12	10	37612	SCREW, CLAMPING (1 1/4")	1		
13	13	37459	LOCKWASHER, CLAMPING SCRE	1		
14	23	60652	SLEEVE, ADJUSTING - CABLE GL	1		
15		57972	GUIDE, CABLE GUIDE TUBE	1	SERIAL 00000000-03386120	
15		64414	GUIDE, CABLE GUIDE TUBE	1	SERIAL 03523080-09999999	
16	23	60773	SLEEVE, CABLE GUIDE TUBE	1		
17		55110	ADAPTOR, CABLE GUIDE TUBE (1		
18	13	20897	LOCKWASHER, DUAL ADAPTOR	1		
19	11	55111	NUT, DUAL ADAPTOR TO POWE	1		
20	32	55112	TUBE, CABLE GUIDE	1		
21	12	37985	WASHER, CABLE GUIDE TUBE	1		
22	11	37984	NUT, CABLE GUIDE TUBE	1		
23		57286	BRACKET, MOUNTING - TRANSC	1		
24	10	31832	SCREW, MOUNTING BRACKET T	2		
25	13	31848	LOCKWASHER, MOUNTING BRA	2		
26	10	57968	SCREW, ADJUSTING - MOUNTIN	1		
27	13	37459	LOCKWASHER, ADJUSTING SCR	1		
28	11	24883	NUT, ADJUSTING SCREW	1		
29	12	20959	WASHER, VALVE ADAPTOR STU	1		
30	11	28040	NUT, VALVE ADAPTOR STUD	1		
31	11	32882	NUT, MOUNTING TUBE	1		
32		57971	TUBE, MOUNTING - BOOSTER R	1		
33	11	55983	NUT, JAM - MOUNTING TUBE	1		
34		57970	EXTENSION, CYLINDER BOOSTE	1		
35		66626	ADAPTOR, ROD END (STARBOA)	1		