



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	50	65784A 1	STARTER MOTOR ASSEMBLY (L	1	SEE NOTE INBOARD	
1	50	65785A 1	STARTER MOTOR ASSEMBLY (R	1	SEE NOTE INBOARD	
2	10	47462	SCREW, STARTER MOTOR TO F	2	INBOARD	
3	13	32993	LOCKWASHER, STARTER MOTO	2	INBOARD	
4	11	28517	NUT, STARTER TERMINAL (3/8"	1	INBOARD	
5	13	26395	LOCKWASHER, STARTER TERM	2	INBOARD	
6	11	26419	NUT, STARTER TERMINAL (#8)	2	INBOARD	
1	50	56886	STARTER MOTOR ASSEMBLY (L	1	SEE NOTE STERN DRIVE	
2	10	26632	SCREW, STARTER MOTOR TO F	1	STERN DRIVE	
2	16	64066	STUD, STARTER MOTOR TO FL)	1	STERN DRIVE	
3	13	37459	LOCKWASHER, STARTER MOTO	2	STERN DRIVE	
5	13	26393	LOCKWASHER, STARTER MOTO	1	STERN DRIVE	
5A	11	32219	NUT, STARTER MOTOR STUD	1	STERN DRIVE	
6	11	21908	NUT, STARTER MOTOR TERMIN	1	STERN DRIVE	
7		36525	WATER TEMPERATURE SENS	1		
8		26396	LOCKWASHER, WATER TEMPEF	1		
9	11	20645	NUT, WATER TEMPERATURE :	1		
10		34623	OIL PRESSURE SENDER ASSEM	1		
11	13	26396	LOCKWASHER, OIL PRESSURE :	1		
12	11	20645	NUT, OIL PRESSURE SENDER T	1		
13	22	54522	NIPPLE, OIL PRESSURE SENDE	1		
14	22	56770	COUPLING, OIL PRESSURE SEN	1	SERIAL 00000000-03386120	
14	22	64485	FITTING, TEE - OIL PRESSURE S	1	SERIAL 03415951-09999999	
15		38559	SWITCH, OIL PRESSURE (FOR IC	1	SERIAL 03415951-09999999	
16	12	20878	WASHER, OIL PRESSURE SWI	1	SERIAL 03415951-09999999	
17	11	20645	NUT, OIL PRESSURE SWITCH	1	SERIAL 03415951-09999999	
18		59755	ALTERNATOR ASSEMBLY	1		
19	10	20055	SCREW, WIRING HARNESS TO /	1		
20	13	26396	LOCKWASHER, WIRING HARNE	1		
21	12	30164	WASHER, WIRING HARNESS SC	1		
22		54479	BRACE, ALTERNATOR ADJUSTI	1		
23	10	29198	SCREW, ALTERNATOR BRACE T	1		
24	12	26168	WASHER, ALTERNATOR BRACE	1		
25	10	55300	SCREW, ALTERNATOR BRACE T	1		
26	13	39107	LOCKWASHER, ALTERNATOR BI	1		
27		61859	BRACKET, ALTERNATOR MOUN	1		
27		54464	BRACKET, ALTERNATOR MOUN	1		
28	10	48308	SCREW, ALTERNATOR TO ALTE	1		
29	12	20553	WASHER, ALTERNATOR BRACK	2		
30	23	63764	BUSHING, ALTERNATOR BRACK	1		
31	11	22161	NUT, ALTERNATOR BRACKET S	1		