



					Parts List		
Ref	Class	Part	Description	Qty	Comment	Footnote	
1		60953	TRANSMISSION, V-DRIVE (DIREC	1			
1		60588	TRANSMISSION, V-DRIVE (1.51:1	1			
1		60954	TRANSMISSION, V-DRIVE (1.99:1	1			
1		60955	TRANSMISSION, V-DRIVE (2.49:1	1			
1		60956	TRANSMISSION, V-DRIVE (3.14:1	1			
2	10	47724	SCREW, TRANSMISSION TO ENI	6			
3	13	32993	LOCKWASHER, TRANSMISSION	6			
4	22	63824	ELBOW, HOSE TO TRANSMISSI	1			
5	32	47516 9	HOSE, OIL COOLER TO TRANSM	1			
6		47613	SWITCH, NEUTRAL SAFETY	1			
7		48386A 1	FLANGE ASSEMBLY (1")	OPT			
7		48387A 1	FLANGE ASSEMBLY (1 1/8")	OPT			
7		48388A 1	FLANGE ASSEMBLY (1 1/4")	OPT			
7		48389A 1	FLANGE ASSEMBLY (1 3/8")	OPT			
7		48390A 1	FLANGE ASSEMBLY (1 1/2")	OPT			
7		57295A 1	FLANGE ASSEMBLY (1 3/4")	OPT			
7		57296A 1	FLANGE ASSEMBLY (2")	OPT			
8	10	60171	SCREW, FLANGE TO PROPELL	2			
8	10	60170	SCREW, FLANGE TO PROPELL	2			
8	10	60169	SCREW, FLANGE TO PROPELL	2			
9	10	60106	SCREW, TRANSMISSION FLAN	4			
10	13	32993	LOCKWASHER, FLANGE SCRE	4			
11	11	22024	NUT, FLANGE SCREW	4			
12		63815A 1	BRACKET, SHIFT CABLE	1			
13	10	22469	SCREW, BRACKET TO TRANSMI	2			
14	13	26992	LOCKWASHER, BRACKET TO TR	2			
15	12	56881	WASHER, SHIFT CALBE TO BRAI	1			
16	11	46438	NUT, SHIFT CABLE TO BRACKE	1			
17	22	47629	ELBOW, HOSE TO TRANSMISSI	1			
18	32	47516 10	HOSE, TRANSMISSION TO OIL C	1			
19	22	47629	ELBOW, HOSE TO OIL COOLER	2			
20		48515	LEVER, SHIFT - TRANSMISSION	1			
21	12	20722	WASHER, SHIFT LEVER TO TRA	1			
22	13	26993	LOCKWASHER, SHIFT LEVER TC	1			
23	11	20083	NUT, SHIFT LEVER TO TRANSMI	1			
24		48652	ADAPTOR, SHIFT CABLE TO SHII	1			
25	16	48680	STUD, SHIFT CABLE ADAPTOR T	1			
26	12	20533	WASHER, SHIFT CABLE ADAPTC	1			
27	11	46887	NUT, SHIFT CABLE ADAPTOR ST	1			
28	13	29402	WAVE WASHER, SHIFT CABLE A	1			
29	12	56881	WASHER, SHIFT CABLE ADAPTC	1			