



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		33694	DISTRIBUTOR ASSEMBLY, COMF	1...	SERIAL 00000000-01539698	8
1		34110	DISTRIBUTOR ASSEMBLY, COMF	1,1,1,1	SERIAL 01539699-09999999	3
2		33708	CAP, DISTRIBUTOR	1,1,1,1		
3		33654	BUTTON, CARBON - DISTRIB	1,1,1,1		
4		33707	ROTOR, DISTRIBUTOR	1,1,1,1		
5	10	33692	SCREW, ROTOR TO BREAKER	2,2,2,2		
6	13	26996	LOCKWASHER, ROTOR RO BR	2,2,2,2		
7	24	33720	SPRING, BREAKER CAM ADVA	2,2,2,2		
8		33698	WEIGHT, BREAKER CAM ADVA	2,2,2,2		
9		33724	SHAFT, MAIN - BREAKER CAM	1...	NOT AS SHOWN	8
9		34119	SHAFT, MAIN - BREAKER CAM	1,1,1,1		3
10	23	34116	SLEEVE, MAIN SHAFT	1,1,1,1		3
11		33719	CAM, BREAKER - ADVANCE	1...		8
11		34117	CAM, BREAKER - ADVANCE	1,1,1,1		3
12		33706	CONDENSER	1,1,1,1		
13		33697	BRACKET, CONDENSER MOUN	1,1,1,1		
14	10	33722	SCREW, CONDENSER AND BR	1,1,1,1		
15		33653	FELT WICK, CAM WIPER - MOU	1,1,1,1		
16		33713	RETAINER, FELT WICK - MOUN	1,1,1,1		
17		33714	PLATE, MOUNTING - BREAKER	1,1,1,1		
18		33705	LEAD, GROUND - MOUNTING	1,1,1,1		
19	24	33710	SPRING, RETAINING - MOUNTI	1,1,1,1		
20		33700	BREAKER ASSEMBLY	1,1,1,1		
21	10	33718	SCREW, BREAKER ASSEMBLY	2,2,2,2		
22	12	33711	WASHER, FELT - MOUNTING P	1...		8
22	12	34112	WASHER, FELT - MOUNTING P	1,1,1,1		3
23		33715	HOUSING, PRIMARY - DISTRIB	1...		8
23		34120	HOUSING, PRIMARY - DISTRIB	1,1,1,1		3
24	26	34111	SEAL, DISTRIBUTOR HOUSIN	1,1,1,1		3
25	25	33709	GROMMET, DISTRIBUTOR HI	1,1,1,1		
26	43	34114	GEAR AND CROSS SHAFT, DIS	1,1,1,1		3
27	12	34115	WASHER, GEAR AND CROSS S	1,1,1,1		3
28		34113	COUPLING, CROSS SHAFT	1,1,1,1		3
29		33695	VACUUM CONTROL, DISTRIBU	1,1,1,1		
30	10	33648	SCREW, VACUUM CONTROL T	2,2,2,2		
31	13	33691	LOCKWASHER, VACUUM CON	2,2,2,2		
32		33690	OILER, DISTRIBUTOR HOUSIN	1...		8
33		33712	LEAD WIRE, PRIMARY - DISTR	1,1,1,1		
34	12	33696	WASHER, MAIN SHAFT	1,1,1,1		
35	43	33725	GEAR, DRIVE - MAIN SHAFT	1...		8
35	42	34118	GEAR, DRIVE - MAIN SHAFT	1,1,1,1		2