



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		32883A 1	BRACKET ASSEMBLY, FRONT MI	1,1,1		
A1		35837A 1	BRACKET ASSEMBLY, FRONT MI	1		
2	23	33186	BRUSHING, FRONT MOUNTING	4,4,4		
3		35852	MOUNT, FRONT MOUNTING BR	2,2,2		
4	25	35789	QUAD RING, FRONT MOUNTIN	1		
5	25	35790	QUAD RING, FRONT MOUNTIN	2		
6	10	33194	SCREW, FRONT MOUNTING BR/	4,4,4		
6	10	35788	SCREW, FRONT MOUNTING BR/	4		
7	13	27969	LOCKWASHER, FRONT MOUNTII	4,4,4		
8	12	20553	WASHER, FRONT MOUNTING BR	4,4,4		
9	394	1051	LOCKWIRE, FRONT MOUNTING	2,2,2		
10		32903	BRACKET, FRONT SUPPORT	1,1,1		
11	16	33172	STUD, ADJUSTING - FRONT SUF	2,2,2		
12	12	33869	WASHER, FRONT SUPPORT BR/	2,2,2		
13	12	32638	WASHER, RUBBER - FRONT SUF	4,4,4		
14	12	33182	WASHER, FRONT SUPPORT BR/	2,2,2		
15	12	33171	WASHER, FRONT SUPPORT BR/	2,2,2		
16	11	22339	NUT, FRONT SUPPORT BRACKE	2,2,2		
17	12	33178	WASHER, FRONT SUPPORT BR/	4,4		
17	12	34726	WASHER, FRONT SUPPORT BR/	4,4		
18	13	33164	LOCKWASHER, FRONT SUPPOR	2,2,2		
19	11	20739	NUT, JAM - FRONT SUPPORT BR	4,4,4		
20	38	31042	SERIAL PLATE, CYLINDER BLOC	1,1,1		
21	10	20314	SCREW, DRIVE - SERIAL TO CYL	2,2,2		
22		32889	PLATE, BEARING - FRONT AND F	4,4,4		
23		32890	PLATE, BEARING - FRONT AND F	4,4,4		
24	10	33158	SCREW, BEARING PLATE TO FR	8,8,8		
25	12	20553	WASHER, BEARING PLATE SCRI	16,16,1		
26	11	25269	NUT, BEARING TO FRONT AND F	8,8,8		
27		32888	BRACKET, REAR SUPPORT	1,1,1		
28		32918A 1	HOUSING ASSEMBLY, FLYWHEE	1,1,1		
29		35852	MOUNT, FLYWHEEL HOUSING	2,2,2		
30	10	28464	SCREW, FLYWHEEL HOUSING T	4,4,4		
31	10	20359	SCREW, FLYWHEEL HOUSING T	3,3,3		
32	13	27969	LOCKWASHER, FLYWHEEL HOU	7,7,7		
33	16	33172	STUD, ADJUSTING - REAR SUPP	2,2,2		
34	12	33869	WASHER, REAR SUPPORT BR/	2,2,2		
35	12	32638	WASHER, RUBBER - REAR SUPP	4,4,4		
36	12	33182	WASHER, REAR SUPPORT BR/	2,2,2		
37	12	33171	WASHER, REAR SUPPORT BR/	2,2,2		
38	11	22339	NUT, REAR SUPPORT BRACKET	2,2,2		