



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-	1337	2604	CARBURETOR ASSEMBLY, COMI	1	
1	1397	2135	AIR HORN ASSEMBLY	1	
2	1397	2104	VALVE, CHOKE - CHOKE SHAF	1	
3	10	33045	SCREW, CHOKE VALVE TO CHC	2	
4	1397	2111	CHOKE SHAFT ASSEMBLY	1	
5			CLIP, CHOKE SHAFT ROD	1	4
6	1397	2112	CHOKE SHAFT ASSEMBLY, INT	1	
7	1397	2117	ROD, CHOKE SHAFT	1	
8	10	33554	SCREW, AIR HORN TO FLOAT	13	
9			FILTER, AIR HORN NUT	1	
10			GASKET, AIR HORN FILTER NL	1	4,3
11	11	33561	NUT, FILTER - AIR HORN	1	
12			BOOT, FLOAT BOWL PUMP	1	4
13	1397	2118	PUMP SHAFT AND LEVER ASS	1	
14			CLIP, PUMP SHAFT AND LEVER	1	4
15	1397	2113	CHOKE LEVER AND COLLAR A'	1	
16	1397	2105	LEVER, TRIP - CHOKE SHAFT	1	
17	10	33056	SCREW TRIP LEVER TO CHOK	1	
18	397	2121	ROD PUMP	1	
19			CLIP, RETAINER - PUMP ROD	2	4
20	1397	2124	ROD CHOKE	1	
21			PIN, HAIR, CHOKE ROD	3	4
22			GASKET, AIR HORN	1	4,3
23			INLET NEEDLE AND SEAT ASS	2	4
24			GASKET, INLET NEEDLE AND	2	4,3
25			STRAINER, INLET NEEDLE ANI	2	
26	1397	2126	FLOAT ASSEMBLY	2	
27	17	33555	PIN, HINGE - FLOAT TO AIR HOR	2	
28	24	33571	SPRING, TORSION - FLOAT	2	
29			PUMP ASSEMBLY, FLOAT BOW	1	4
30			PIN, HAIR - FLOAT BOWL PUMF	1	4
31			SPRING FLOAT BOWL PUMP R	1	
32			BALL, FLOAT BOWL PUMP INLE	1	
33			GUIDE, PUMP DISCHARGE - FL	1	
34			SPRING, PUMP DISCHARGE - F	1	
35			BALL, PUMP DISCHARGE - FLO	2	
36	1397	2453	JET, PRIMARY - FLOAT BOWL	2	
37	1397	2451	JET, SECONDARY - FLOAT BOV	2	
38	1397	2129	POWER PISTON ASSEMBLY	1	
39			POWER VALVE ASSEMBLY, FLI	1	
40			GASKET, POWER VALVE	1	4,2