



Parts List					
Ref	Class	Part	Description	Qty	Footnote
1		36368	HYDRAULIC PUMP ASSEMBLY, F	1	
2		38333	CAP, FILLER - HYDRAULIC PUM	1	
3	32	55117	HOSE, RETURN - POWER STEEF	1	SERIAL 00000000-03386120
3	32	65929	HOSE, RETURN - POWER STEEF	1	SERIAL 03523080-09999999
3	32	65231	HOSE, RETURN - POWER STEEF	1	SERIAL 03523080-09999999
4	54	35830	CLAMP, HOSE TO HYDRAULIC PI	3	
5	32	55116	HOSE, PRESSURE - POWER STE	1	
6		57969	CYLINDER, BOOSTER - POWER :	1	
7		26059	CAP, RUBBER - BOOSTER CYLIN	1	
8	32	57633	TUBE, EXTENDING - POWER STI	1	
9	32	57634	TUBE, RETRACTING - POWER S	1	
8	32	57632	TUBE, EXTENDING - POWER STI	1	
9	32	57631	TUBE, RETRACTING - POWER S	1	
10		52779	VALVE, POWER STEERING	1	
10A	22	67305	FITTING, GREASE - POWER VAL	1	
11	16	55109	STUD, ADAPTOR - POWER STEE	1	
12	10	37612	SCREW, CLAMPING (1 1/4")	1	
13	13	37459	LOCKWASHER, CLAMPING SCRE	1	
14	23	60652	SLEEVE, ADJUSTING - CABLE GL	1	
15		57972	GUIDE, CABLE GUIDE TUBE	1	SERIAL 00000000-03386120
15		64414	GUIDE, CABLE GUIDE TUBE	1	SERIAL 03523080-09999999
16	23	60773	SLEEVE, CABLE GUIDE TUBE	1	
17		55110	ADAPTOR, CABLE GUIDE TUBE (1	
18	13	20897	LOCKWASHER, DUAL ADAPTOR	1	
19	11	55111	NUT, DUAL ADAPTOR TO POWE	1	
20	32	55112	TUBE, CABLE GUIDE	1	
21	12	37985	WASHER, CABLE GUIDE TUBE	1	
22	11	37984	NUT, CABLE GUIDE TUBE	1	
23		57286	BRACKET, MOUNTING - TRANSC	1	
24	10	31832	SCREW, MOUNTING BRACKET T	2	
25	13	31848	LOCKWASHER, MOUNTING BRA	2	
26	10	57968	SCREW, ADJUSTING - MOUNTIN	1	
27	13	37459	LOCKWASHER, ADJUSTING SCR	1	
28	11	24883	NUT, ADJUSTING SCREW	1	
29	12	20959	WASHER, VALVE ADAPTOR STU	1	
30	11	28040	NUT, VALVE ADAPTOR STUD	1	
31	11	32882	NUT, MOUNTING TUBE	1	
32		57971	TUBE, MOUNTING - BOOSTER R	1	
33	11	55983	NUT, JAM - MOUNTING TUBE	1	
34		57970	EXTENSION, CYLINDER BOOSTE	1	
35		66626	ADAPTOR, ROD END (STARBOARD)	1	