



Parts List					
Ref	Class	Part	Description	Qty	Footnote
-		62767A 7	TRANSMISSION ASSEMBLY, COM	1	B-62767A7 TRANSMISSION ASS
1		62767A 4	HOUSING ASSEMBLY, TRANSM	1	
3			PIN, SPRING - TRANSMISSIO	1	1
4	22	47902	VENT, TRANSMISSION HOUS	1	
5		64090A 1	TUBE ASSEMBLY, DIPSTICK	1	
6		63037	DIPSTICK, OIL LEVEL GAUG	1	
7			BALL, TRANSMISSION HOUS	1	1
8	22	36373	PLUG, PIPE - TRANSMISSIO	1	
8A	10	47462	SCREW, TRANSMISSION HOUS	6	NOT INCLUDED WITH TRANSM
8B	13	32993	LOCKWASHER, TRANSMISSIO	6	NOT INCLUDED WITH TRANSM
9			"O" RING, PUMP TO TRANSMI	2	2
10			"O" RING, PUMP TO TRANSMI	1	2
11			"O" RING, PUMP TO TRANSMI	1	2
12		62718A 2	PUMP ASSEMBLY	1	
13			SEAL, PUMP COVER	1	2
14	22	20025	PLUG, PUMP	2	
15		62722	PISTON, RELIEF VALVE	1	
16	24	62790	SPRING, RELIEF VALVE PISTO	1	
17			"O" RING, PUMP PLUG (3/4" O.	2	2
18	19	62753	PLUG, PUMP	2	
19	10	35386	SCREW, PUMP TO TRANSMISSI	5	
19	10	31984	SCREW, PUMP TO TRANSMISSI	2	
20			WASHER, SEALING - PUMP SC	7	2
21			"O" RING, PUMP (3 7/16" O.D.)	1	2
22		62662	PUMP, GEROTOR	1	
23	10	60300	SCREW, PUMP ATTACHING (3/	7	
24	13	26992	LOCKWASHER, PUMP SCREW	7	
25		63126	FLANGE ASSEMBLY, OIL COOL	1	
26	10	66137	SCREW, FLANGE TO TRANSMI	1	
27	13	26992	LOCKWASHER, FLANGE SCRE	1	
28			"O" RING, FLANGE TO TRANSM	1	2
29		66515A 1	COVER ASSEMBLY, OIL COOLER	1	
30	27	62724	GASKET, OIL COOLER COVER	1	
31	22	36373	PLUG, PIPE - COVER	1	
32	11	21612	NUT, JAM - OIL COOLER	2	
33			"O" RING, OIL COOLER JAMN	2	2
34	10	60300	SCREW, COVER TO TRANSMISS	4	
35	13	26992	LOCKWASHER, COVER SCREW	4	
36		62740A 2	CONTROL VALVE ASSEMBLY	1	
37			BALL, CONTROL VALVE (1/4"	1	1
38	22	28072	PLUG, CONTROL VALVE	1	