



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	749	4058	PISTON AND PISTON PIN ASSEM	8		
1	749	4059	PISTON AND PISTON PIN ASSEM	AR		
1	749	4060	PISTON AND PISTON PIN ASSEM	AR		
2	39	56114	RING ASSEMBLY, PISTON (STAN	4		
2	39	56115	RING ASSEMBLY, PISTON (.020 C	AR		
3	623	4679	CONNECTING ROD ASSEMBLY	8		
4	10	56123	BOLT, CONNECTING ROD	16		
5	11	56122	NUT, CONNECTING ROD BOLT	16		
6	23	56116	BEARING UNIT, CONNECTING RI	8		
6	23	56117	BEARING UNIT, CONNECTING RI	AR		
6	23	56118	BEARING UNIT, CONNECTING RI	AR		
6	23	56119	BEARING UNIT, CONNECTING RI	AR		
6	23	56121	BEARING UNIT, CONNECTING RI	AR		
7	446	4064	CRANKSHAFT (LEFT HAND CRA	1		
7	446	4065	CRANKSHAFT (RIGHT HAND CR	1		
8	23	71647	BEARING, CLUTCH PILOT	1		
9	238	4428	FLYWHEEL ASSEMBLY (LEFT HA	1		
9	238	4055	FLYWHEEL ASSEMBLY (RIGHT F	1		
10	10	60706	BOLT, FLYWHEEL TO CRANKSH	6		
11		62819	DRIVE PLATE, FLYWHEEL (MC II	1		
11		47608	DRIVE PLATE, FLYWHEEL (INBO	1		
12	10	56889	SCREW, DRIVE PLATE TO FLYW	6		
13	13	26993	LOCKWASHER, DRIVE PLATE SC	6		
14		59826A 1	ENGINE COUPLING ASSEMBLY N	1		
15	16	60993	STUD, ENGINE COUPLING ATT	6		
16	12	32648	WASHER, ENGINE COUPLING	6		
17	11	56407	NUT, ENGINE COUPLING ATTA	6		
18	26	56868	OIL SEAL, CRANKSHAFT REAR (L	1		
18	26	56869	OIL SEAL, CRANKSHAFT REAR (R	1		
19	23	56890	BEARING, CRANKSHAFT MAIN -I	4		
19	23	56892	BEARING, CRANKSHAFT MAIN -I	AR		
19	23	56894	BEARING, CRANKSHAFT MAIN -I	AR		
19	23	56896	BEARING, CRANKSHAFT MAIN -I	AR		
19	23	56898	BEARING, CRANKSHAFT MAIN -I	AR		
20	23	56891	BEARING, CRANKSHAFT MAIN -I	1		
20	23	56893	BEARING, CRANKSHAFT MAIN -I	AR		
20	23	56895	BEARING, CRANKSHAFT MAIN -I	AR		
20	23	56897	BEARING, CRANKSHAFT MAIN -I	AR		
20	23	56899	BEARING, CRANKSHAFT MAIN -I	AR		
21	23	56900	BEARING, CRANKSHAFT - LOWE	4		
21	23	56902	BEARING, CRANKSHAFT MAIN -I	AR		