



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1	84	62137	WIRING HARNESS -MC11-TR	1	SERIAL 00000000-03386120	
1	84	64606	WIRING HARNESS -MC11-TR	1	SERIAL 03523080-09999999	
1	84	66964	WIRING HARNESS (MC 225-S)	1		
2		26079	PLATE, WIRING HARNESS TO M	1		
3	10	46718	SCREW, WIRING HARNESS TO F	4		
4		63087	BRACKET, MOUNTING - HARNEE	1		
4		64636	BRACKET, MOUNTING - HARNEE	1		
5	10	25038	SCREW, MOUNTING BRACKET A	2		
5	10	59645	SCREW, MOUNTING BRACKET A	1		
6	13	26993	LOCKWASHER, MOUNTING BRA	2		
7		39974	CONNECTOR, TRIM LEADS - MOI	2	SERIAL 00000000-03386120	
8	10	45862	SCREW, CONNECTOR TO BRAC	2	SERIAL 00000000-03386120	
7	86	63813	TERMINAL BLOCK, TRIM LEADS	1	SERIAL 03523080-09999999	
8	10	48591	SCREW, TERMINAL BLOCK TO B	2	SERIAL 03523080-09999999	
8A	10	62568	SCREW, LEAT ATTACHING -MC	1	SERIAL 03523080-09999999	
9		54869	BRACKET, MOUNTING - STARTE	1		
10		36177	INSULATOR, SOLENOID TO MOL	1		
11	54	61001	CLIP, WIRING HARNESS TO ROC	1		
12		65057	STARTER SOLENOID	1		
13	10	22956	SCREW, STARTER SOLENOID TI	2		
14	12	22937	WASHER, STARTER SOLENOID	2		
15	11	20361	NUT, STARTER SOLENOID SCRE	2		
16	13	26996	LOCKWASHER, STARTER SOLEI	2		
17	11	20645	NUT, STARTER SOLENOID TERM	2		
18	13	26993	LOCKWASHER, STARTER SOLEI	2		
19	11	20083	NUT, STARTER SOLENOID TERM	2		
20		54979	CABLE, STARTER SOLENOID TO	1		
21		59816	CIRCUIT BREAKER -MC 11-TR	1		
22	10	36046	SCREW, WIRING HARNESS LE	2		
21	88	65093	CIRCUIT BREAKER (NOT AS SHC	1		
21	11	20645	NUT, CIRCUIT BREAKER TERM	2		
21	13	26996	LOCKWASHER, CIRCUIT BREA	2		
23	10	47618	SCREW, CIRCUIT BREAKER TO	2		
24	25	61999	GROMMET, CIRCUIT BREAKER S	4		
25	12	47960	WASHER, CIRCUIT BREAKER SC	4		
26	23	61998	SPACER, CIRCUIT BREAKER GRI	2		
27	11	46438	NUT, CIRCUIT BREAKER SCREW	2		
28		52418	TERMINAL BLOCK, NEUTRAL ST	1		
29	10	21091	SCREW, TERMINAL BLOCK TO F	1		
30	13	26992	LOCKWASHER, TERMINAL BLOC	1		
31	11	24652	NUT, TERMINAL BLOCK SCREW	1		