



Parts List						
Ref	Class	Part	Description	Qty	Comment	Footnote
1		59821	PLATE,TRANSOM(WITHOUT GIM	1		
1		65545	PLATE,TRANSOM(WITH GIMBAL	1		
3	10	37269	SCREW, TRANSOM PLATE TO GI	2		
4	10	37268	SCREW, TRANSOM PLATE TO G	2		
5	13	37272	LOCKWASHER, TRANSOM PLAT	4		
6	12	37271	WASHER, SQUARE - TRANSOM	2		
7	10	36289	SCREW, TRANSOM PLATE TO EI	2		
8	12	28421	WASHER, TRANSOM PLATE SCF	2		
9	23	36290	SPACER, TRANSOM PLATE SCR	2		
10	12	32834	WASHER, TRANSOM PLATE SCF	2		
11	13	33734A	LOCKWASHER, TRANSOM PLAT	2		
12	11	20220	NUT, TRANSOM PLATE TO ENGI	2		
13	12	21900	WASHER, GIMBAL HOUSING TO	2		
14	11	34087	NUT, GIMBAL HOUSING TO TRAI	2		
15		75158	TUBE, STEERING CABLE GUIDE	1		
16	11	37984	NUT, JAM - STEERING CABLE GL	2		
17	12	37985	WASHER, STEERING CABLE GUI	2		
18		66065A	CABLE ASSEMBLY, SHIFT ACTUA	1	SERIAL 00000000-04428019	
18		73679A	CABLE ASSEMBLY, SHIFT ACTUA	1	SERIAL 04428020-09999999	
19		66069A	CORE WIRE ASSY, INNER SHII	1		
20	32	38377	TUBE, SHIFT ACTUATING CA	1		
21		29880	GUIDE, SHIFT ACTUATING CABL	1		
22		20007	ANCHOR, SHIFT ACTUATING CA	1		
23	10	20518	SCREW, SET - ANCHOR TO SHIF	2		
24		38473	WRAPPING, SHIFT ACTUATING (1		
25	32	34049	TUBE, NYLON - SHIFT ACTUATIN	1		
26		33981	SLIDE, SHIFT ACTUATING CABLE	1		
27	10	31700	SCREW, SET - SHIFT ACTUATIN	1		